

# Clavinova®

## CVP-701

Data List  
 Daten-Liste  
 Liste des données  
 Lista de datos  
 Lista de dados

Piano Types in the Piano Room .....2 Klaviermodelle im Piano Room Types de piano dans Piano Room Tipos de pianos de Piano Room Tipos de piano do Piano Room	Style List ..... 21 Liste der Styles Liste des styles Lista de estilos Lista de estilos
Accompaniment Types in the Piano Room.....2 Begleitungsarten im Piano Room Types d'accompagnements dans Piano Room Tipos de acompañamientos de Piano Room Tipos de acompanhamento do Piano Room	Direct Access Chart ..... 23 Tabelle Direktzugriff Feuille d'accès direct Gráfico de acceso directo Gráfico de acesso direto
Voice List .....3 Voice-Liste Liste des sonorités Lista de voces Lista de vozes	Chord Types Recognized in the Fingered Mode ..... 25 Im Fingered-Modus erkannte Akkordarten Types d'accords reconnus en mode Fingered Tipos de acordes reconocidos en el modo Fingered (digitado) Tipos de acorde reconhecidos no modo dedilhado
Mega Voice Map .....14 Sound-Zuordnungen der Mega Voices Carte des sonorités Mega Voice Mapa de Mega Voice Mapa de voz mega	Effect Type List ..... 26 Liste der Effektypen Liste des types d'effet Lista de tipos de efecto Lista de tipos de efeito
Drum/key Assignment List .....15 Liste der Tastenzuordnungen der Schlaginstrumente Liste des affectations d'instrument de batterie/touche de clavier Lista de asignación de teclas/batería Lista de atribuições de bateria/tecla	Parameter Chart ..... 33 Parametertabelle Tableau des paramètres Gráfico de parâmetros Gráfico de parâmetro

**Piano Types in the Piano Room / Klaviermodelle im Piano Room / Types de piano dans Piano Room / Tipos de pianos de Piano Room / Tipos de piano do Piano Room**

CFX Grand
Bösendorfer
Pop Grand
HonkyTonk
SuitcaseEP
VintageEP
SweetDX

**Accompaniment Types in the Piano Room / Begleitungsarten im Piano Room / Types d'accompagnements dans Piano Room / Tipos de acompañamientos de Piano Room / Tipos de acompanhamento do Piano Room**

ContempGtrPop
StandardPnoBld
SwingMedium
StandardWaltz
BrazilianBossa
80sAmericanPop
WestCoastBeat
Easy8Beat1
Easy8Beat2
60sBigHit
70sPianoHit
SmoothBallad
90sPianoBallad
AcousticGtrBld
EasyAcousticBld
MOR16Beat
6-8BalladRock
CoolJazzClub
SlowJazzBallad
FastJazz
CoolJazzWaltz
EasyWaltz
StandardSwing
FunkyShuffle
70sCoolShuffle

6-8SoulBallad
VintageR&R
TheBlues
EasyCountryPop
70sCountrySwing
SlowCountryPop
CountryPopBld
CoolBossa
BossaSlow
BossaFast
SambaFast
RumbaBolero
StandardRumba
CartoonBallad
ModBroadwyBld

# Voice List / Voice-Liste / Liste des sonorités / Lista de voces / Lista de vozes

Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Piano	CFX Grand	108	0	1	VRM	
	PopGrand	108	17	2	VRM	
	StudioGrand	108	30	1	VRM	
	BrightPiano	108	16	2	VRM	
	OctavePiano1	108	22	2	VRM	
	Bösendorfer	108	6	1	VRM	
	RockPiano	108	16	3	VRM	
	AmbientPiano	108	27	4	VRM	
	CocktailPiano	108	28	4	VRM	
	OctavePiano2	108	23	2	VRM	
	CFX Grand	0	122	1	Natural!	
	PopGrand	104	6	1	Natural!	
	StudioGrand	104	19	1	Natural!	
	BrightPiano	0	123	1	Natural!	
	OctavePiano1	0	123	4	Natural!	
	Bösendorfer	104	18	1	Natural!	
	RockPiano	0	124	3	Natural!	
	AmbientPiano	104	19	4	Natural!	
	CocktailPiano	104	20	4	Natural!	
	OctavePiano2	0	124	4	Natural!	
	MIDIGrand	104	0	3	Live!	
	MIDIGrandSyn	104	1	1	Live!	
	HonkyTonk	0	112	4	Regular	
	Harpsichord2	8	32	113	S.Art!	
	Harpsichord1	0	122	7	Natural!	
	MIDIGrandPad	104	1	3	Live!	
	PianoOrchestra	104	2	1	Live!	
	WarmGrand	0	114	1	Live!	
	GrandHarpsi	0	113	7	Live!	
	HarpsiCoupler	0	123	7	Natural!	
	E.Piano	SuitcaseEP	0	118	5	Cool!
		VintageEP	0	116	5	Regular
		ElectricPiano	0	119	5	Cool!
		SmoothTine	0	119	6	Regular
		TremoloSuitcase	0	113	5	Cool!
		SweetDX	104	0	6	Cool!
		BalladDX	0	124	6	Cool!
		DX Dynamics	0	123	6	Cool!
		BalladBells	104	2	6	Cool!
		MidnightDX	104	1	6	Cool!
		StageEP	0	117	5	Regular
		ClaviBright	0	112	8	Regular
		WahClavi	0	113	8	Regular
PhaseClavi		0	115	8	Regular	
GalaxyEP		0	114	5	Cool!	
CP80Stage		0	113	3	Regular	
DreamDX		104	3	6	Cool!	
SparkleStack		0	121	6	Cool!	
Organ		WhiterBars	8	32	30	S.Art!
		AllBarsOut	8	32	31	S.Art!
		JazzRotary	8	32	114	S.Art!
		ClassicBars	8	34	30	S.Art!
		Organ-a-Go-Go	104	0	17	Cool!
	CurvedBars	0	121	17	Cool!	
	EvenBars	0	111	17	Cool!	
	VintageFast	0	127	17	Cool!	
	RotorOrgan	0	117	19	Cool!	
	ClassicJazz	0	117	17	Cool!	
	RockRotary	8	33	114	S.Art!	
	FullRocker	0	115	19	Cool!	
	ProgRockOrgan	8	33	30	S.Art!	
	R&B Tremolo	0	111	19	Cool!	
	ScannerJazz	0	118	19	Cool!	
	OrganAccomp1	0	108	18	Regular	
	OrganAccomp2	0	107	18	Regular	
	OrganAccomp3	0	106	18	Regular	
	OrganAccomp4	0	105	18	Regular	
	OrganAccomp5	0	104	18	Regular	
	FullOrgan	0	112	20	Regular	
	ChapelOrgan	0	113	20	Regular	
	HymnOrgan	0	114	20	Regular	
	ChurchOrgan	0	115	20	Regular	
	Tibia8'	104	6	18	Regular	

Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Organ	FullTheatre	0	127	19	Regular	
	SweetTheatre	0	126	19	Regular	
	TibiaChorus	104	5	18	Regular	
	Tibia16'&4'	104	8	17	Regular	
	Tibia8'&4'	104	9	17	Regular	
	TwoChannels	0	109	18	Cool!	
	HoldItFast	0	111	18	Cool!	
	MellowDrawbar	0	115	18	Regular	
	JazzSlow	0	126	18	Cool!	
	JazzFast	0	127	18	Cool!	
	WhiterBarsSlow	104	1	18	Cool!	
	WhiterBarsFast	104	0	18	Cool!	
	AllBarsOutSlow	104	1	19	Cool!	
	AllBarsOutFast	104	0	19	Cool!	
	AllBarsPhase	104	2	19	Cool!	
	BallroomOrgan	0	115	4	Regular	
	VoxHumana8'	104	7	18	Regular	
	Trumpet8'	0	124	17	Regular	
	Vox&Tibia	104	10	17	Regular	
	EuroOrgan	0	118	17	Regular	
	Kinura8'	0	123	17	Regular	
	Tpt&Kinura	0	125	18	Regular	
	Trumpet16'&8'	0	124	18	Regular	
	Guitar	ConcertGuitar	8	32	1	S.Art!
		SteelGuitar	8	32	2	S.Art!
		FlamencoGuitar	8	33	1	S.Art!
		SemiAcoustic	8	33	7	S.Art!
		PedalSteel	8	36	4	S.Art!
		SingleCoilClean	8	39	4	S.Art!
		CrunchGuitar	8	33	6	S.Art!
		RockLegend	8	34	6	S.Art!
		GuitarHero	8	32	6	S.Art!
		JazzClean	8	32	7	S.Art!
NylonGuitar		8	34	1	S.Art!	
FolkGuitar		8	33	2	S.Art!	
12StringGuitar		0	113	26	Live!	
CleanSolid		8	34	4	S.Art!	
Mandolin		0	114	26	Sweet!	
WarmElectric		8	32	4	S.Art!	
CleanElectric		8	35	4	S.Art!	
WarmSolid		8	33	4	S.Art!	
VintageAmp		8	40	4	S.Art!	
SmoothJazzGt		8	35	7	S.Art!	
SlideNylon		0	117	25	Live!	
SlideSteel		0	118	26	Live!	
SlideClean		0	117	29	Cool!	
SlideSolid		0	110	28	Cool!	
AlohaGuitar		0	118	27	Regular	
HeavyRock		8	32	5	S.Art!	
HalfDrive		8	37	4	S.Art!	
Slapback		104	0	28	Cool!	
VintageLead		0	125	28	Cool!	
SlideJazz		104	0	27	Cool!	
DynamicNylon		0	116	25	Live!	
DynamicSteel		0	116	26	Live!	
70sSolidGuitar		8	38	4	S.Art!	
DynamicMute		0	118	29	Cool!	
PedalSteel		0	115	28	Regular	
BluesGuitar		0	117	30	Cool!	
ElectricGuitar		0	114	29	Cool!	
TremoloSolid		0	111	28	Cool!	
ChorusSolid		0	107	28	Cool!	
BalladSolid		0	109	28	Cool!	
HardFlamenco		0	118	25	Live!	
ClassicalGuitar		0	115	25	Live!	
SteelGuitar		0	117	26	Live!	
60sClean	0	117	28	Regular		
Sitar	104	0	105	Regular		
Feedbacker	8	33	5	S.Art!		
PowerLead	0	115	31	Cool!		
CleanGuitar	0	112	28	Cool!		
SlapSolid	0	108	28	Cool!		
JazzSoloGuitar	0	116	27	Cool!		

Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Guitar	NylonMute	0	119	25	Live!	
	SteelMute	0	120	26	Live!	
	VintageOpen	0	123	28	Regular	
	MutedGuitar	0	119	29	Cool!	
	VintageAmp	0	115	30	Regular	
	HeavyStack	0	114	31	Regular	
	CrunchGuitar	0	113	31	Regular	
	VintageMuteEcho	0	115	29	Regular	
	VintageStrum	0	126	28	Regular	
	OctaveGuitar	0	113	27	Regular	
	JazzGuitar	0	115	27	Cool!	
	FunkGuitar	0	116	29	Cool!	
	Bass	ElectricBass	0	114	34	Cool!
		AcousticBass	0	112	33	Regular
PickDynoBass		0	113	35	Cool!	
FretlessBass		0	112	36	Cool!	
SlapBass		0	112	37	Regular	
VintageRound		104	1	34	Cool!	
VintageFlat		104	2	34	Cool!	
VintageMute		104	3	34	Cool!	
HalfMute		0	115	34	Cool!	
VintagePick		104	1	35	Regular	
LoBass		104	0	40	Regular	
DarkBass		104	1	40	Regular	
MoonBass		104	0	39	Regular	
KickBass		104	1	39	Regular	
ClubBass		104	2	39	Regular	
FatPulse		104	2	40	Regular	
WazzoSaw		104	3	81	Regular	
DeepPoint		104	3	39	Regular	
TightBass		104	3	40	Regular	
Competitor		104	4	39	Regular	
1o1Sub		104	5	39	Regular	
LittleBassSynth		104	6	39	Regular	
TeknoBass		104	7	39	Regular	
PercPunch		104	8	39	Regular	
SquareBass		104	4	40	Regular	
TranceBass		104	9	39	Regular	
SubCutBass		104	5	40	Regular	
DynoAcidBass		104	10	39	Regular	
MiniSub		104	6	40	Regular	
FatSineRes		104	11	39	Regular	
BalladBass		104	7	40	Regular	
VeloMaster		104	17	82	Regular	
MellowFinger		0	112	34	Regular	
VintagePickMute		104	0	35	Cool!	
VintageDyno		104	2	35	Cool!	
RockBass		0	114	35	Regular	
SuperFretless		0	113	36	Regular	
PickBass		0	112	35	Regular	
FusionBass		0	113	37	Regular	
Bass&Cymbal		0	114	33	Regular	
SubBass		0	114	40	Regular	
HardBass		0	114	39	Regular	
ResoBass		0	112	39	Regular	
HouseBass		0	116	39	Regular	
BigDrone		0	118	39	Regular	
FunkBass		0	112	38	Regular	
TB Bass		0	117	40	Regular	
Accordion		Harmonica	0	112	23	Sweet!
		FullRegister	104	2	22	Regular
		MasterAccord	0	118	22	Regular
		JazzAccordion	0	120	22	Regular
		Cajun	104	3	22	Regular
		FrenchMusette	0	119	22	Regular
	Steirische	0	117	22	Regular	
	Cassotto	104	0	22	Regular	
	AccordionClari	104	1	22	Regular	
	Bandoneon	0	113	24	Regular	
	TangoAccordion	0	114	24	Regular	
	FullRegBass	104	5	22	Regular	
	MasterBass	0	122	22	Regular	
	AccordionBass	0	121	22	Regular	

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Accordion	CajunBass	104	6	22	Regular
	MusetteBass	0	123	22	Regular
	TangoBass	0	115	24	Regular
Strings	ConcertStrings	8	32	50	S.Art!
	StudioStrings	8	32	49	S.Art!
	Spiccato	0	120	49	Live!
	Pizzicato	0	113	46	Live!
	TremoloStrings	0	113	45	Live!
	Violin	0	113	41	Sweet!
	DiscoStrings1	0	123	50	Live!
	DiscoStrings2	0	124	50	Live!
	MovieStrings	0	123	49	Live!
	OrchestralHarp	104	1	47	Regular
	Strings f	0	119	49	Live!
	Strings mf	0	118	49	Live!
	Strings p	0	117	49	Live!
	DynamicStrings	0	124	49	Live!
	TremoloBowling	8	34	49	S.Art!
	Tutti	0	120	50	Regular
	SymphonicUnison	104	0	50	Regular
	Strings	0	117	50	Live!
	Allegro	0	122	50	Live!
	MellowHarp	104	0	47	Regular
	Banjo	104	0	106	Regular
	Hackbrett	104	2	47	Regular
	Zither1	104	1	16	Regular
	Zither2	104	0	16	Regular
	OrchestraHit	0	112	56	Regular
	Spiccato	8	33	49	S.Art!
	SynthStrings1	0	112	51	Regular
SynthStrings2	0	113	51	Regular	
OberStrings	0	113	52	Regular	
TheatreOrchestra	104	1	50	Regular	
SoloViolin	0	112	41	Regular	
Viola	0	112	42	Regular	
Cello	0	112	43	Regular	
Contrabass	0	112	44	Regular	
Fiddle	0	112	111	Regular	
Koto	0	112	108	Regular	
Shamisen	0	112	107	Regular	
ChamberStrings	0	112	50	Regular	
PizzGlock	0	115	46	Live!	
Brass	BrightTrumpet	8	32	65	S.Art!
	SilverTrumpet	8	33	65	S.Art!
	MutedTrumpet	0	114	60	Sweet!
	TrumpetFall	8	38	65	S.Art!
	Cornet	0	119	57	Sweet!
	MellowTrumpet	0	120	57	Sweet!
	GoldenTrumpet	8	34	65	S.Art!
	BigBandTrumpet	8	37	65	S.Art!
	TrumpetShake	8	35	65	S.Art!
	Trombone	0	117	58	Sweet!
	Trumpet	0	115	57	Sweet!
	SilverTrumpet	0	121	57	Sweet!
	BigBandBrass	8	37	57	S.Art!
	PopBrass	0	117	63	Live!
	Sforzando	0	105	62	Live!
	FlugelHorn	0	118	57	Sweet!
	GoldenTrumpet	0	122	57	Sweet!
	BallroomBrass	0	113	60	Regular
	BrassShake	8	32	57	S.Art!
	AccentFalls	8	38	57	S.Art!
	SmoothBrass	8	36	57	S.Art!
	DynamicBrass	0	127	62	Live!
	PowerBrass	0	121	63	Live!
	OctaveBrass	0	116	63	Live!
	SoftTrombones	0	118	61	Live!
	SymphonyBrass	0	119	61	Live!
	SymphonyHorns	0	115	61	Live!
FrenchHorns	0	112	61	Live!	
SoftHorns	0	117	61	Live!	
Tuba	104	0	59	Regular	
Brass f	0	108	62	Live!	

Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Brass	Brass mf	0	110	62	Live!	
	Brass p	0	111	62	Live!	
	BrassFalls f	8	34	57	S.Art!	
	BrassFalls mf	8	35	57	S.Art!	
	SforzandoFall	0	107	62	Live!	
	BrassDynamics	0	106	62	Live!	
	SmallBrass	0	120	61	Live!	
	AccentBrass	0	109	62	Live!	
	BrassBand	0	123	57	Live!	
	OberBrass	0	113	64	Regular	
	ThinthBrass	104	0	63	Regular	
	BrassProfit	104	1	63	Regular	
	SlowPWMBrass	104	2	63	Regular	
	FastPWMBrass	104	6	63	Regular	
	80sBrass	0	113	63	Regular	
	AnalogBrass	0	112	64	Regular	
	SoftAnalog	0	114	64	Regular	
	FunkyAnalog	0	115	63	Regular	
	TechnoBrass	0	114	63	Regular	
	OberHorns	0	115	64	Regular	
	FatSynthBrass	0	116	64	Regular	
	HyperBrass	0	118	63	Live!	
	SoftVeloBrass	0	120	63	Regular	
	BaritoneHit	0	114	59	Regular	
	BaritoneHorn	0	113	59	Regular	
	AlpBass	0	113	34	Regular	
	Woodwind	Saxophone	8	32	83	S.Art!
		BigBandSax	8	35	83	S.Art!
		RockSax	8	33	83	S.Art!
		SopranoSax	0	113	65	Sweet!
AltoSax		0	114	66	Sweet!	
TenorSax		0	117	67	Sweet!	
GrowlSax		0	111	67	Sweet!	
PopTenor		0	127	67	Sweet!	
BalladTenor		0	126	67	Sweet!	
BaritoneSax		0	112	68	Regular	
JazzTenor		0	125	67	Sweet!	
SaxSectionSoft		0	121	67	Live!	
SaxSectionHard		0	122	67	Live!	
BigBandSaxes		0	110	67	Live!	
BigBandUnison		0	109	67	Live!	
BigBandOctave		0	108	67	Live!	
SaxAppeal		0	123	67	Live!	
SaxSection		0	116	67	Live!	
Moonlight		0	115	72	Regular	
BalladSection		0	119	67	Regular	
OrchFlute		104	0	74	Sweet!	
OrchOboe		104	0	69	Sweet!	
OrchClarinet		104	0	72	Live!	
OrchBassoon		104	0	71	Sweet!	
GermanClarinet		104	2	72	Regular	
JazzFlute		0	114	74	Sweet!	
ClassicalOboe		0	113	69	Sweet!	
JazzClarinet		0	114	72	Sweet!	
BalladPanFlute		0	113	76	Sweet!	
ClassicalFlute		0	115	74	Sweet!	
Flutes&Oboes		104	2	74	Regular	
Clarinet&Flutes		104	1	72	Regular	
Clarinet&Oboe		104	1	69	Regular	
DoubleReeds		104	2	69	Regular	
OrchWoodwind		104	1	71	Regular	
AltoFlutes		104	1	74	Regular	
Piccolo		0	112	73	Regular	
Whistle		0	112	79	Regular	
Recorder		0	112	75	Regular	
Ocarina		0	112	80	Regular	
Shakuhachi	0	112	78	Regular		
Bagpipe	0	112	110	Regular		
FluteEnsemble	0	116	74	Regular		
Choir&Pad	GothicVox	0	113	54	Regular	
	HahPad	0	116	95	Regular	
	UuhChoir	0	115	53	Regular	
	GospelVoices	0	116	53	Live!	

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Choir&Pad	HahChoir	0	114	53	Regular
	CrossPhase	104	1	102	Regular
	NewAtmosphere	104	4	90	Regular
	VPSof	104	0	90	Regular
	DarkFatSaw	104	2	90	Regular
	VaporPad	104	1	90	Regular
	ButterStrings	104	2	51	Regular
	BrightFatSaw	104	5	91	Regular
	SuperDarkPad	0	119	90	Regular
	AnalogPad	0	120	90	Regular
	Insomnia	0	113	95	Regular
	DreamHeaven	0	121	89	Regular
	SweetHeaven	0	118	89	Regular
	Sunbeam	0	123	89	Regular
	BellHeaven	0	119	89	Regular
	PanHeaven	0	120	89	Regular
	ProHeaven	0	122	89	Regular
	GalaxyPad	104	3	89	Regular
	NightMotion	104	4	89	Regular
	MorningDew	104	0	95	Regular
	Aerosphere	104	1	95	Regular
	HotSwell	104	2	96	Regular
	SpaceRider	104	1	96	Regular
	PearlsPad	104	2	89	Regular
	NobleMan	104	1	89	Regular
	DouxFlange	104	3	96	Regular
	LightPad	104	2	52	Regular
	MediumTunePad	104	0	51	Regular
	NylonPad	104	0	100	Regular
	DarkLight	104	3	90	Regular
	Humming	0	118	53	Live!
	Mmh	0	117	53	Live!
	BreathPad	104	0	92	Regular
	AnaDayz	104	3	52	Regular
	BrightPadTrance	104	4	91	Regular
	OctaveStrings	104	4	51	Regular
	ChillinChords	104	6	52	Regular
	BrightPopPad	104	3	51	Regular
	PremiumPad	104	0	52	Regular
	SoftEnsemble	104	1	51	Regular
	80sPad	104	1	52	Regular
	BrightPadClassic	104	3	91	Regular
	AmbientPad	104	0	89	Regular
	TranceMW	104	0	96	Regular
	EarlyDigital	104	0	94	Regular
	Bellsphere	104	5	89	Regular
	SixthSense	104	2	102	Regular
	PercPad	104	0	102	Regular
	DarkAngelPad	0	121	90	Regular
	LitePad	0	122	90	Regular
PopPad	0	112	91	Regular	
GloriousPhase	0	114	91	Regular	
AnalogSwell	0	119	96	Regular	
Skydiver	0	112	102	Regular	
HipaStrings	0	114	96	Regular	
BrightSawPad	0	113	91	Regular	
BigOctavePad	0	115	91	Regular	
GoldenAge	0	115	89	Regular	
Solaris	0	114	95	Regular	
Mediterrain	0	114	100	Regular	
OberSweep	0	115	96	Regular	
TimeTravel	0	116	89	Regular	
Bubblespace	0	113	102	Regular	
MagicBell	8	32	121	S.Art!	
MellowPad	0	117	96	Regular	
NeoWarmPad	0	115	90	Regular	
CyberPad	0	113	100	Regular	
BrightOber	0	113	96	Regular	
DarkPad	0	118	96	Regular	
Synth	ClubLead	104	3	63	Regular
	HPFDance	104	0	91	Regular
	DetunedSawOct	104	8	82	Regular
	DancyHook	104	9	82	Regular

Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Synth	VinalogSaw	104	3	82	Regular
	CryingLead	0	114	88	Regular
	HipLead	0	113	81	Regular
	HopLead	0	117	81	Regular
	SoftMini	0	124	81	Regular
	FireWire	0	116	82	Regular
	Analogon	0	115	82	Regular
	TalkModLead	104	0	88	Regular
	SubLead	104	0	81	Regular
	SoftSaw	104	16	82	Regular
	FusionLead	104	15	82	Regular
	BleepLead	104	0	85	Regular
	Oxygen	0	122	82	Regular
	Matrix	0	123	82	Regular
	WireLead	0	120	82	Regular
	SoftR&B	0	119	81	Regular
	EarlyLead	0	118	82	Regular
	LektroCodes	104	2	85	Regular
	SimpleComp	104	12	82	Regular
	BalladComp	104	6	89	Regular
	HeavenBell	104	0	101	Regular
	BrightPadBell	104	7	89	Regular
	SoftSquare	104	5	81	Regular
	WildPWM	104	4	81	Regular
	DetunedVintage	104	1	85	Regular
	PWMLead	104	1	82	Regular
	BrassyLead	104	5	63	Regular
	PunchLead	104	7	82	Regular
	FlangeFilter	104	2	82	Regular
	MouthLead	104	0	82	Regular
	ResonantClavi	104	2	91	Regular
	ResonanceComp	104	4	63	Regular
	TrancePerc	104	5	82	Regular
	Chordmaster	104	13	82	Regular
	DigitalSeq	104	2	88	Regular
	AnalogSeq	104	3	88	Regular
	TranceSeq1	104	4	88	Regular
	TranceSeq2	104	5	88	Regular
	TranceSeq3	104	1	91	Regular
	PercSeqFS	104	6	88	Regular
	PercSeqFM1	104	7	88	Regular
	PercSeqFM2	104	8	88	Regular
	SynthSticks	104	0	107	Regular
	SazFeeze	104	0	98	Regular
	EasternAir	104	1	98	Regular
	Xtune	104	1	88	Regular
	PitchFall	104	0	104	Regular
	PercSeqSaw	104	11	82	Regular
	PercSeqHipa	104	9	88	Regular
	Attack	104	4	82	Regular
	PWMPercussion	104	6	82	Regular
	Nomad	104	1	105	Regular
	ChorusSawLead	104	10	82	Regular
	FaaatComp	104	4	52	Regular
	FatSawHook	104	7	52	Regular
	TechGlide	104	14	82	Regular
	DanceChords	104	5	52	Regular
	DanceHook	0	112	87	Regular
	OctaveHook	0	113	87	Regular
	HipaLead	0	118	85	Regular
PunchyHook	0	127	82	Regular	
TechLead	0	117	85	Regular	
Tekkline	0	116	85	Regular	
TranceLead	0	121	81	Regular	
Skyline	0	115	85	Regular	
Percussion	Vibraphone	0	112	12	Regular
	JazzVibes	0	113	12	Regular
	Vibes&Flutes	0	114	12	Regular
	Marimba	0	112	13	Regular
	Xylophone	0	112	14	Regular
	SteelDrums	0	112	115	Regular
	Celesta	0	112	9	Regular
	Glockenspiel	0	112	10	Regular

Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Percussion	MusicBox	0	112	11	Regular	
	TubularBells	0	112	15	Regular	
	Kalimba	0	112	109	Regular	
	Dulcimer	0	112	16	Regular	
	Timpani	0	112	48	Regular	
	StackBell	104	8	89	Regular	
	NiceBell	104	9	89	Regular	
	DrumKit	RealDrums	127	0	92	Live!Drums
		PowerKit1	127	0	88	Live!Drums
		PowerKit2	127	0	89	Live!Drums
		BrushKit	127	0	41	Live!Drums
		JazzKit	127	0	33	Drums
		AcousticKit	127	0	90	Live!Drums
		RockKit	127	0	91	Live!Drums
		StudioKit	127	0	87	Live!Drums
		HitKit	127	0	5	Drums
		SymphonyKit	127	0	49	Live!Drums
		AnalogT8Kit	127	0	59	Drums
AnalogT9Kit		127	0	60	Drums	
BreakKit		127	0	58	Drums	
HipHopKit		127	0	57	Drums	
DanceKit		127	0	28	Drums	
RoomKit		127	0	9	Drums	
ElectroKit		127	0	25	Drums	
AnalogKit		127	0	26	Drums	
OrganFlutes		CubanKit	126	0	41	Live!SFX
		PopLatinKit	126	0	44	Live!SFX
	NoisesKit	126	0	9	SFX	
	TurkishKit	126	0	68	Live!SFX	
	SFX Kit1	126	0	1	SFX	
	SFX Kit2	126	0	2	SFX	
	HouseKit	127	0	61	Drums	
	OrganFlutes	10	0	9	OrganFlutes	
	USD Smile	10	1	9	OrganFlutes	
	ReggaeBars	10	2	9	OrganFlutes	
	WarmTheatre	10	3	9	OrganFlutes	
	OrganPops	10	4	9	OrganFlutes	
	RockOrgan	10	5	9	OrganFlutes	
	SoulPercussion	10	6	9	OrganFlutes	
	GospelTruth	10	7	9	OrganFlutes	
	PadOrgan	10	8	9	OrganFlutes	
	FullOrgan	10	9	9	OrganFlutes	
	StringBars	10	0	10	OrganFlutes	
	LatinSpin	10	1	10	OrganFlutes	
	ShadyBars	10	2	10	OrganFlutes	
FunkOrgan	10	3	10	OrganFlutes		
BalladOrgan	10	4	10	OrganFlutes		
RichBars	10	5	10	OrganFlutes		
TrumpetBars	10	6	10	OrganFlutes		
SoulBars	10	7	10	OrganFlutes		
ClariBars	10	8	10	OrganFlutes		
JazzSquabble	10	9	10	OrganFlutes		

## Category: Legacy

Sub Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Piano	ConcertGrand	0	115	1	Live!	
	GrandPiano	0	113	1	Live!	
	PopGrand	104	5	1	Live!	
	RockPiano	104	4	1	Live!	
	BrightPiano	0	112	2	Live!	
	AmbientPiano	104	3	1	Live!	
	CocktailPiano	104	0	4	Live!	
	OctavePiano1	0	113	4	Live!	
	OctavePiano2	0	114	4	Live!	
	MIDIGrand	0	112	3	Regular	
	Harpsichord	0	112	7	Live!	
	E.Piano	BalladStack	0	114	3	Regular
FunkEP		0	112	5	Regular	
HyperTines		0	113	6	Regular	
JazzChorus		0	118	6	Regular	
ModernEP		0	115	6	Regular	
NewTines		0	116	6	Regular	
PhaseEP		0	120	5	Regular	
ChorusBell		0	120	6	Regular	
DX Modern		0	112	6	Regular	
PolarisEP		0	115	5	Regular	
SuperDX		0	117	6	Regular	
VenusEP		0	114	6	Regular	
StereoClavi		0	114	8	Regular	
Organ		RotarySwitch	0	110	18	Cool!
		FullRocker2	104	3	19	Cool!
	BrightDrawbar	0	116	17	Regular	
	ClickOrgan	0	112	18	Regular	
	DrawbarOrgan1	0	120	18	Regular	
	DrawbarOrgan2	0	115	17	Regular	
	DanceOrgan	0	113	18	Regular	
	ElectricOrgan	0	118	18	Regular	
	GospelOrgan	0	119	17	Regular	
	JazzOrgan1	0	112	17	Regular	
	JazzOrgan2	0	113	17	Regular	
	JazzOrgan3	0	120	17	Regular	
	PercOrgan	0	119	18	Regular	
	PurpleOrgan	0	114	19	Regular	
	RockOrgan1	0	112	19	Regular	
	RockOrgan2	0	119	19	Regular	
	RockOrgan3	0	113	19	Regular	
	RotaryDrive	0	116	19	Regular	
	60sOrgan	0	116	18	Regular	
	ReedOrgan	0	112	21	Regular	
	Tibia8' Acmp	0	122	18	Regular	
	Tibia8'&4' Acmp	0	122	17	Regular	
	Tibia16'&4' Acmp	0	114	17	Regular	
	TibiaFullAcmp	0	114	18	Regular	
	Vox8' Acmp	0	123	18	Regular	
	Vox&Tibia Acmp	0	125	17	Regular	
	ClassicJazz	0	126	17	OrganFlutes	
	Guitar	CampfireGuitar	0	115	26	Regular
		FolkGuitar	0	112	26	Regular
		18StringGuitar	0	119	26	Regular
BrightClean		0	116	28	Regular	
ChorusGuitar		0	124	28	Regular	
DeepChorus		0	114	28	Regular	
Electric12String		0	119	28	Regular	
FunkGuitar		0	113	29	Regular	
MutedGuitar		0	112	29	Regular	
SolidChord		0	121	28	Regular	
SolidGuitar		0	118	28	Regular	
TremoloGuitar		0	113	28	Regular	
VintageTrem		0	120	28	Regular	
WahGuitar		0	122	28	Regular	
DXJazzGuitar		0	117	27	Regular	
DistortionGuitar		0	112	31	Regular	
FeedbackGuitar		0	113	30	Regular	
PowerChord		0	117	31	Regular	
VoodooLead		0	116	31	Regular	
OverdriveGuitar		0	112	30	Regular	
LeadGuitar		0	114	30	Regular	
RockGuitar		0	116	30	Regular	

## Category: Legacy

Sub Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Guitar	SmoothLead	0	119	27	Regular	
Bass	80sSynthBass	0	115	40	Regular	
	AnalogBass	0	112	40	Regular	
	ClickBass	0	115	39	Regular	
	DrySynthBass	0	116	40	Regular	
	DX FunkBass	0	113	38	Regular	
	HiQBass	0	113	39	Regular	
	PunchyBass	0	117	39	Regular	
	Accordion	BluesHarp	0	114	23	Regular
ModernHarp		0	113	23	Regular	
Accordion		0	116	22	Regular	
BallroomAcc		0	112	24	Regular	
Musette		0	112	22	Regular	
SmallAccordion		0	115	22	Regular	
SoftAccordion		0	114	22	Regular	
TuttiAccordion		0	113	22	Regular	
Strings		Orchestra	0	116	50	Live!
		StringFalls	0	121	49	Live!
	BowStrings	0	116	49	Regular	
	ConcertoStrings	0	115	49	Regular	
	Marcato	0	115	50	Regular	
	OrchStrings	0	113	49	Regular	
	Pizzicato	0	112	46	Regular	
	SlowStrings	0	113	50	Regular	
	StringQuartet	0	114	50	Regular	
	Strings	0	112	49	Regular	
	Symphonic	0	114	49	Regular	
	TremoloStrings	0	112	45	Regular	
	Orch&Flute	0	119	50	Regular	
	Orch&Oboe	0	121	50	Regular	
	Orch&Horns	0	118	50	Regular	
	AnalogStrings	0	112	52	Regular	
	Harp	0	112	47	Regular	
	Hackbrett2	0	113	47	Regular	
	Banjo2	0	112	106	Regular	
	Sitar2	0	112	105	Regular	
Brass	SoloTrumpet	0	112	57	Regular	
	JazzTrumpet	0	116	57	Regular	
	MutedTrumpet	0	112	60	Regular	
	SoloTrombone	0	112	58	Regular	
	Trombone	0	116	58	Regular	
	MellowTrombone	0	114	58	Regular	
	SoftTrombone	0	115	58	Regular	
	SmoothTrombone	0	118	58	Regular	
	Tuba2	0	112	59	Regular	
	BigBandBrass	0	113	62	Regular	
	BigBrass	0	121	62	Regular	
	BrassCombo	0	115	67	Regular	
	BrassSection	0	112	62	Regular	
	BreathBrass	0	116	61	Regular	
	BrightBrass	0	120	62	Regular	
	FullHorns	0	114	62	Regular	
	HighBrass	0	115	62	Regular	
	MellowBrass	0	116	62	Regular	
	NaturalBrass	0	124	62	Regular	
	Sforzando	0	125	62	Regular	
SmallBrass	0	117	62	Regular		
SoftBrass	0	123	62	Regular		
TrumpetEns	0	122	62	Regular		
BrassHit	0	126	62	Regular		
TbnSection	0	113	58	Regular		
MellowHorns	0	119	62	Regular		
FlugelHorn	0	113	57	Regular		
HybridComp	0	119	63	Regular		
Hybrihorn	0	113	61	Regular		
Hybridpad	0	114	61	Regular		
PopBrass	0	118	62	Regular		
SynthBrass	0	112	63	Regular		
Woodwind	SopranoSax	0	112	65	Regular	
	AltoSax	0	112	66	Regular	
	TenorSax	0	112	67	Regular	
	GrowlSax	0	118	67	Regular	
	SaxStack	0	124	67	Regular	

**Category: Legacy**

Sub Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Woodwind	SaxyMood	0	120	67	Regular	
	Flute	0	112	74	Regular	
	Oboe	0	112	69	Regular	
	EnglishHorn	0	112	70	Regular	
	Clarinet	0	112	72	Regular	
	Bassoon	0	112	71	Regular	
	ChiffPanFlute	0	113	74	Regular	
	EthnicFlute	0	112	76	Regular	
	WoodwindsEns	0	113	67	Regular	
	Choir&Pad	Voices	0	113	55	Regular
		Choir	0	112	53	Regular
		AirChoir	0	112	55	Regular
		VoxHumana	0	112	54	Regular
		Area51	0	112	90	Regular
		DarkMoon	0	113	90	Regular
Dunes		0	114	90	Regular	
Equinox		0	112	95	Regular	
EveningStars		0	117	102	Regular	
Fantasia		0	112	89	Regular	
GlassPad		0	114	94	Regular	
Ionosphere		0	115	95	Regular	
Messenger		0	116	96	Regular	
PsychoPad		0	118	102	Regular	
S&H Groove		0	115	102	Regular	
Sirius		0	114	102	Regular	
Wave2001		0	112	96	Regular	
XenonPad		0	112	92	Regular	
DX Pad		0	112	93	Regular	
Stargate		0	114	89	Regular	
AngelVibes		0	114	99	Regular	
Atmosphere		0	112	100	Regular	
DigitalPad		0	115	94	Regular	
Disclosure		0	116	90	Regular	
FarEast		0	112	98	Regular	
Millennium		0	117	89	Regular	
Mystery		0	113	98	Regular	
Symbiont		0	113	89	Regular	
VeloAshrami		0	116	102	Regular	
Synth		CrystalEyes	0	125	89	Regular
		MelodyMaker	0	117	90	Regular
		Padbells	0	126	89	Regular
		PanLead	0	122	81	Regular
		PercSquare	0	123	81	Regular
		PopLead	0	120	81	Regular
	Portatone	0	112	85	Regular	
	ProLead	0	113	84	Regular	
	Stardust	0	112	99	Regular	
	StringBells	0	124	89	Regular	
	SunBell	0	113	99	Regular	
	Blaster	0	114	82	Regular	
	FunkyLead	0	121	82	Regular	
	OrbitSine	0	126	81	Regular	
	Paraglide	0	114	85	Regular	
	Robolead	0	124	82	Regular	
	UnderHeim	0	112	88	Regular	
	Adrenaline	0	113	85	Regular	
	AeroLead	0	112	84	Regular	
	AttackSaw	0	126	82	Regular	
	BigLead	0	113	82	Regular	
	BrightMini	0	125	81	Regular	
	Fargo	0	119	82	Regular	
	HiBias	0	116	81	Regular	
	Impact	0	113	88	Regular	
	MiniLead	0	114	81	Regular	
	SawLead	0	112	82	Regular	
	SquareLead	0	112	81	Regular	
	TinyLead	0	118	81	Regular	
	TrumpetSaw	0	125	82	Regular	
	VinylLead	0	115	81	Regular	
	Warp	0	117	82	Regular	
	BigTune	0	118	90	Regular	
	DrumKit	StandardKit1	127	0	1	Live!Drums
		StandardKit2	127	0	2	Live!Drums

**Category: Legacy**

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
DrumKit	RockKit	127	0	17	Drums
	ArabicKit	126	0	36	SFX

**Category: MegaVoices**

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Guitar	NylonGuitar	8	0	1	MegaVoice
	SteelGuitar	8	0	2	MegaVoice
	12StringGuitar	8	1	3	MegaVoice
	HiStringGuitar	8	0	3	MegaVoice
	CleanGuitar	8	0	4	MegaVoice
	SolidGuitar1	8	1	4	MegaVoice
	SolidGuitar2	8	2	4	MegaVoice
	SingleCoil	8	3	4	MegaVoice
	JazzGuitar	8	0	7	MegaVoice
	DistortionGuitar	8	0	6	MegaVoice
	OverdriveGuitar	8	0	5	MegaVoice
	Bass	VintageRound	8	1	18
VintageFlat		8	2	18	MegaVoice
VintagePick		8	1	19	MegaVoice
AcousticBass		8	0	17	MegaVoice
ElectricBass		8	0	18	MegaVoice
PickBass		8	0	19	MegaVoice
FretlessBass		8	0	20	MegaVoice
Strings	SmallStrings	8	0	49	MegaVoice
	LargeStrings	8	0	50	MegaVoice
Brass	Brass	8	0	57	MegaVoice
	Trumpet	8	0	65	MegaVoice
Woodwind	TenorSax	8	0	83	MegaVoice

**Category: GM&XG**

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Piano	GrandPiano	0	0	1	Regular
	GrndPianoKSP	0	1	1	Regular
	MellowGrPno	0	18	1	Regular
	PianoStrings	0	40	1	Regular
	Dream	0	41	1	Regular
	BrightPiano	0	0	2	Regular
	BritePnoKSP	0	1	2	Regular
	ElecGrandPno	0	0	3	Regular
	ElecGrPnoKSP	0	1	3	Regular
	DetunedCP80	0	32	3	Regular
	LayeredCP1	0	40	3	Regular
	LayeredCP2	0	41	3	Regular
	Honkytonk	0	0	4	Regular
	HonkytonkKSP	0	1	4	Regular
	El.Piano1	0	0	5	Regular
	El.Piano1KSP	0	1	5	Regular
	MellowEP1	0	18	5	Regular
	ChorusEP1	0	32	5	Regular
	HardEl.Piano	0	40	5	Regular
	VXfadeEL.P1	0	45	5	Regular
	60sEl.Piano1	0	64	5	Regular
	El.Piano2	0	0	6	Regular
	El.Piano2KSP	0	1	6	Regular
	ChorusEP2	0	32	6	Regular
	DXEPHard	0	33	6	Regular
	DXLegend	0	34	6	Regular
	DXPhaseEP	0	40	6	Regular
	DX+AnalogEP	0	41	6	Regular
	DXKotoEP	0	42	6	Regular
	VXfadeEL.P2	0	45	6	Regular
	Harpsichord	0	0	7	Regular
	Harpsi.KSP	0	1	7	Regular
	Harpsichord2	0	25	7	Regular
	Harpsichord3	0	35	7	Regular
	Clavi.	0	0	8	Regular
	Clavi.KSP	0	1	8	Regular



## Category: GM&amp;XG

Sub Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Piano	Clavi.Wah	0	27	8	Regular	
	PulseClavi.	0	64	8	Regular	
	PierceClavi.	0	65	8	Regular	
ChromaticPerc	Celesta	0	0	9	Regular	
	Glockenspiel	0	0	10	Regular	
	MusicBox	0	0	11	Regular	
	Orgel	0	64	11	Regular	
	Vibraphone	0	0	12	Regular	
	VibesKSP	0	1	12	Regular	
	HardVibes	0	45	12	Regular	
	Marimba	0	0	13	Regular	
	MarimbaKSP	0	1	13	Regular	
	SineMarimba	0	64	13	Regular	
	Balimba	0	97	13	Regular	
	LogDrums	0	98	13	Regular	
	Xylophone	0	0	14	Regular	
	TubularBells	0	0	15	Regular	
	ChurchBells	0	96	15	Regular	
	Carillon	0	97	15	Regular	
	Dulcimer	0	0	16	Regular	
	Dulcimer2	0	35	16	Regular	
	Cimbalom	0	96	16	Regular	
	Santur	0	97	16	Regular	
Organ	DrawbarOrgan	0	0	17	Regular	
	DetDrawOrgan	0	32	17	Regular	
	60sDrawOrg1	0	33	17	Regular	
	60sDrawOrg2	0	34	17	Regular	
	60sDrawOrg3	0	37	17	Regular	
	70sDrawOrg1	0	35	17	Regular	
	70sDrawOrg2	0	65	17	Regular	
	DrawbarOrg2	0	36	17	Regular	
	EvenBarOrg	0	38	17	Regular	
	16+2'2_3Org	0	40	17	Regular	
	OrganBass	0	64	17	Regular	
	CheezyOrgan	0	66	17	Regular	
	DrawbarOrg3	0	67	17	Regular	
	Perc.Organ	0	0	18	Regular	
	Perc.Organ2	0	37	18	Regular	
	70sPercOrg1	0	24	18	Regular	
	DetPercOrgan	0	32	18	Regular	
	LightOrgan	0	33	18	Regular	
	RockOrgan	0	0	19	Regular	
	RotaryOrgan	0	64	19	Regular	
	SlowRotary	0	65	19	Regular	
	FastRotary	0	66	19	Regular	
	ChurchOrgan	0	0	20	Regular	
	ChurchOrgan2	0	35	20	Regular	
	ChurchOrgan3	0	32	20	Regular	
	NotreDame	0	40	20	Regular	
	OrganFlute	0	64	20	Regular	
	Trem.OrganFl	0	65	20	Regular	
	ReedOrgan	0	0	21	Regular	
	PuffOrgan	0	40	21	Regular	
	Accordion	0	0	22	Regular	
	AccordIt	0	32	22	Regular	
	Harmonica	0	0	23	Regular	
	Harmonica2	0	32	23	Regular	
	TangoAccord	0	0	24	Regular	
	TangoAccord2	0	64	24	Regular	
	Guitar	NylonGuitar	0	0	25	Regular
		NylonGuitar2	0	16	25	Regular
		NylonGuitar3	0	25	25	Regular
		VelGtrHarmo	0	43	25	Regular
		Ukulele	0	96	25	Regular
		SteelGuitar	0	0	26	Regular
		SteelGuitar2	0	16	26	Regular
		12StrGuitar	0	35	26	Regular
		Nylon&Steel	0	40	26	Regular
		Steel&Body	0	41	26	Regular
		Mandolin	0	96	26	Regular
JazzGuitar		0	0	27	Regular	
MellowGuitar		0	18	27	Regular	
JazzAmp		0	32	27	Regular	

## Category: GM&amp;XG

Sub Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Guitar	CleanGuitar	0	0	28	Regular	
	ChorusGuitar	0	32	28	Regular	
	MutedGuitar	0	0	29	Regular	
	FunkGuitar1	0	40	29	Regular	
	MuteSteelGtr	0	41	29	Regular	
	FunkGuitar2	0	43	29	Regular	
	JazzMan	0	45	29	Regular	
	Overdriven	0	0	30	Regular	
	GuitarPinch	0	43	30	Regular	
	Distortion	0	0	31	Regular	
	FeedbackGtr	0	40	31	Regular	
	FeedbackGtr2	0	41	31	Regular	
	GtrHarmonics	0	0	32	Regular	
	GtrFeedback	0	65	32	Regular	
	GtrHarmonic2	0	66	32	Regular	
	Bass	AcousticBass	0	0	33	Regular
		JazzRhythm	0	40	33	Regular
		VXUprghtBass	0	45	33	Regular
		FingerBass	0	0	34	Regular
		FingerDark	0	18	34	Regular
		FlangeBass	0	27	34	Regular
		Bass&DistEG	0	40	34	Regular
		FingerSlap	0	43	34	Regular
		FingerBass2	0	45	34	Regular
		Mod.Bass	0	65	34	Regular
		PickBass	0	0	35	Regular
		MutePickBass	0	28	35	Regular
FretlessBass		0	0	36	Regular	
Fretless2		0	32	36	Regular	
Fretless3		0	33	36	Regular	
Fretless4		0	34	36	Regular	
Syn.Fretless		0	96	36	Regular	
SmthFretless		0	97	36	Regular	
SlapBass1		0	0	37	Regular	
ResonantSlap		0	27	37	Regular	
PunchThumb		0	32	37	Regular	
SlapBass2		0	0	38	Regular	
Velo.Sw.Slap		0	43	38	Regular	
SynthBass1		0	0	39	Regular	
SynBass1Dark		0	18	39	Regular	
FastResoBass		0	20	39	Regular	
AcidBass		0	24	39	Regular	
ClaviBass		0	35	39	Regular	
TechnoBass		0	40	39	Regular	
Orbiter		0	64	39	Regular	
SquareBass		0	65	39	Regular	
RubberBass		0	66	39	Regular	
Hammer		0	96	39	Regular	
SynthBass2	0	0	40	Regular		
MellowSyBass	0	6	40	Regular		
SequenceBass	0	12	40	Regular		
ClickSynBass	0	18	40	Regular		
SynBass2Dark	0	19	40	Regular		
SmoothSyBass	0	32	40	Regular		
ModulrSyBass	0	40	40	Regular		
DXBass	0	41	40	Regular		
XWireBass	0	64	40	Regular		
Strings	Violin	0	0	41	Regular	
	SlwAtkViolin	0	8	41	Regular	
	Viola	0	0	42	Regular	
	Cello	0	0	43	Regular	
	Contrabass	0	0	44	Regular	
	Trem.Strings	0	0	45	Regular	
	SlwAtTremStr	0	8	45	Regular	
	SuspenseStr	0	40	45	Regular	
	PizzicatoStr	0	0	46	Regular	
	Orch.Harp	0	0	47	Regular	
	YangQin	0	40	47	Regular	
Ensemble	Timpani	0	0	48	Regular	
	Strings1	0	0	49	Regular	
	StereoStrngs	0	3	49	Regular	
	SlwAtkStrngs	0	8	49	Regular	
	ArcoStrings	0	24	49	Regular	

## Category: GM&amp;XG

Sub Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Ensemble	60'sStrings	0	35	49	Regular	
	Orchestra	0	40	49	Regular	
	Orchestra2	0	41	49	Regular	
	TremOrchestra	0	42	49	Regular	
	Velo.Strings	0	45	49	Regular	
	Strings2	0	0	50	Regular	
	S.SlowStrngs	0	3	50	Regular	
	LegatoStrngs	0	8	50	Regular	
	WarmStrings	0	40	50	Regular	
	Kingdom	0	41	50	Regular	
	70'sStrings	0	64	50	Regular	
	Strings3	0	65	50	Regular	
	SynStrings1	0	0	51	Regular	
	ResoStrings	0	27	51	Regular	
	SynStrings4	0	64	51	Regular	
	SynStrings5	0	65	51	Regular	
	SynStrings2	0	0	52	Regular	
	ChoirAahs	0	0	53	Regular	
	StereoChoir	0	3	53	Regular	
	ChoirAahs2	0	16	53	Regular	
	MellowChoir	0	32	53	Regular	
	ChoirStrings	0	40	53	Regular	
	VoiceOohs	0	0	54	Regular	
	SynthVoice	0	0	55	Regular	
	SynthVoice2	0	40	55	Regular	
	Choral	0	41	55	Regular	
	AnalogVoice	0	64	55	Regular	
	OrchestraHit	0	0	56	Regular	
	OrchestrHit2	0	35	56	Regular	
	Impact	0	64	56	Regular	
	Brass	Trumpet	0	0	57	Regular
		Trumpet2	0	16	57	Regular
		BriteTrumpet	0	17	57	Regular
		WarmTrumpet	0	32	57	Regular
		Trombone	0	0	58	Regular
		Trombone2	0	18	58	Regular
		Tuba	0	0	59	Regular
		Tuba2	0	16	59	Regular
		MutedTrumpet	0	0	60	Regular
		FrenchHorn	0	0	61	Regular
		Fr.HornSolo	0	6	61	Regular
		FrenchHorn2	0	32	61	Regular
		HornOrchestr	0	37	61	Regular
		BrassSection	0	0	62	Regular
Tp&TbSection		0	35	62	Regular	
BrassSect2		0	40	62	Regular	
HighBrass		0	41	62	Regular	
MellowBrass		0	42	62	Regular	
SynthBrass1		0	0	63	Regular	
QuackBrass		0	12	63	Regular	
ResoSynBrass		0	20	63	Regular	
PolyBrass		0	24	63	Regular	
SynthBrass3		0	27	63	Regular	
JumpBrass		0	32	63	Regular	
AnaVelBrass1		0	45	63	Regular	
AnalogBrass1		0	64	63	Regular	
SynthBrass2		0	0	64	Regular	
SoftBrass		0	18	64	Regular	
SynthBrass4		0	40	64	Regular	
ChoirBrass		0	41	64	Regular	
AnaVelBrass2		0	45	64	Regular	
AnalogBrass2		0	64	64	Regular	
Reed		SopranoSax	0	0	65	Regular
	AltoSax	0	0	66	Regular	
	SaxSection	0	40	66	Regular	
	HyperAltoSax	0	43	66	Regular	
	TenorSax	0	0	67	Regular	
	BreathyTenor	0	40	67	Regular	
	SoftTenorSax	0	41	67	Regular	
	TenorSax2	0	64	67	Regular	
	BaritoneSax	0	0	68	Regular	
	Oboe	0	0	69	Regular	
	EnglishHorn	0	0	70	Regular	

## Category: GM&amp;XG

Sub Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Reed	Bassoon	0	0	71	Regular	
	Clarinet	0	0	72	Regular	
Pipe	Piccolo	0	0	73	Regular	
	Flute	0	0	74	Regular	
	Recorder	0	0	75	Regular	
	PanFlute	0	0	76	Regular	
	BlownBottle	0	0	77	Regular	
	Shakuhachi	0	0	78	Regular	
	Whistle	0	0	79	Regular	
	Ocarina	0	0	80	Regular	
	Synth.Lead	SquareLead	0	0	81	Regular
		SquareLead2	0	6	81	Regular
		LMSquare	0	8	81	Regular
Hollow		0	18	81	Regular	
Shroud		0	19	81	Regular	
Mellow		0	64	81	Regular	
SoloSine		0	65	81	Regular	
SineLead		0	66	81	Regular	
SawtoothLead		0	0	82	Regular	
SawtoothLd2		0	6	82	Regular	
ThickSaw		0	8	82	Regular	
DynamicSaw		0	18	82	Regular	
DigitalSaw		0	19	82	Regular	
BigLead		0	20	82	Regular	
HeavySynth		0	24	82	Regular	
WasySynth		0	25	82	Regular	
PulseSaw		0	40	82	Regular	
Dr.Lead		0	41	82	Regular	
VelocityLead		0	45	82	Regular	
Seq.Analog		0	96	82	Regular	
CalliopeLead		0	0	83	Regular	
PureLead		0	65	83	Regular	
ChiffLead		0	0	84	Regular	
Rubby		0	64	84	Regular	
CharangLead		0	0	85	Regular	
DistortedLd		0	64	85	Regular	
WireLead		0	65	85	Regular	
VoiceLead		0	0	86	Regular	
SynthAahs		0	24	86	Regular	
VoxLead		0	64	86	Regular	
FifthsLead		0	0	87	Regular	
BigFive		0	35	87	Regular	
Bass&Lead		0	0	88	Regular	
Big&Low	0	16	88	Regular		
Fat&Perky	0	64	88	Regular		
SoftWhirl	0	65	88	Regular		
Synth.Pad	NewAgePad	0	0	89	Regular	
	Fantasy	0	64	89	Regular	
	WarmPad	0	0	90	Regular	
	ThickPad	0	16	90	Regular	
	SoftPad	0	17	90	Regular	
	SinePad	0	18	90	Regular	
	HornPad	0	64	90	Regular	
	RotaryStrngs	0	65	90	Regular	
	PolySynthPad	0	0	91	Regular	
	PolyPad80	0	64	91	Regular	
	ClickPad	0	65	91	Regular	
	AnalogPad	0	66	91	Regular	
	SquarePad	0	67	91	Regular	
	ChoirPad	0	0	92	Regular	
	Heaven	0	64	92	Regular	
	Itopia	0	66	92	Regular	
	CCPad	0	67	92	Regular	
	BowedPad	0	0	93	Regular	
	Glacier	0	64	93	Regular	
	GlassPad	0	65	93	Regular	
	MetallicPad	0	0	94	Regular	
	TinePad	0	64	94	Regular	
	PanPad	0	65	94	Regular	
	HaloPad	0	0	95	Regular	
	SweepPad	0	0	96	Regular	
	Shwimmer	0	20	96	Regular	
	Converge	0	27	96	Regular	

## Category: GM&amp;XG

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Synth.Pad	PolarPad	0	64	96	Regular
	Celestial	0	66	96	Regular
Synth.Effect	Rain	0	0	97	Regular
	ClaviPad	0	45	97	Regular
	HarmoRain	0	64	97	Regular
	AfricanWind	0	65	97	Regular
	Carib	0	66	97	Regular
	SoundTrack	0	0	98	Regular
	Prologue	0	27	98	Regular
	Ancestral	0	64	98	Regular
	Crystal	0	0	99	Regular
	SynthDr.Comp	0	12	99	Regular
	Popcorn	0	14	99	Regular
	TinyBells	0	18	99	Regular
	RoundGlocken	0	35	99	Regular
	GlockenChime	0	40	99	Regular
	ClearBells	0	41	99	Regular
	ChorusBells	0	42	99	Regular
	SynthMallet	0	64	99	Regular
	SoftCrystal	0	65	99	Regular
	LoudGlocken	0	66	99	Regular
	ChristmasBel	0	67	99	Regular
	VibeBells	0	68	99	Regular
	DigitalBells	0	69	99	Regular
	AirBells	0	70	99	Regular
	BellHarp	0	71	99	Regular
	Gamelimba	0	72	99	Regular
	Atmosphere	0	0	100	Regular
	WarmAtmos.	0	18	100	Regular
	HollwRelease	0	19	100	Regular
	NylonElPiano	0	40	100	Regular
	NylonHarp	0	64	100	Regular
	HarpVox	0	65	100	Regular
	Atmos.Pad	0	66	100	Regular
	Planet	0	67	100	Regular
	Brightness	0	0	101	Regular
	FantasyBells	0	64	101	Regular
	Smokey	0	96	101	Regular
	Goblins	0	0	102	Regular
	GoblinsSynth	0	64	102	Regular
	Creepier	0	65	102	Regular
	RingPad	0	66	102	Regular
	Ritual	0	67	102	Regular
	ToHeaven	0	68	102	Regular
	Night	0	70	102	Regular
	Glisten	0	71	102	Regular
	BellChoir	0	96	102	Regular
	Echoes	0	0	103	Regular
	Echoes2	0	8	103	Regular
	EchoPan	0	14	103	Regular
	EchoBells	0	64	103	Regular
	BigPan	0	65	103	Regular
	SynthPiano	0	66	103	Regular
	Creation	0	67	103	Regular
	StarDust	0	68	103	Regular
Reso&Panning	0	69	103	Regular	
Sci-Fi	0	0	104	Regular	
Starz	0	64	104	Regular	
Ethnic	Sitar	0	0	105	Regular
	DetunedSitar	0	32	105	Regular
	Sitar2	0	35	105	Regular
	Tambra	0	96	105	Regular
	Tamboura	0	97	105	Regular
	Banjo	0	0	106	Regular
	MutedBanjo	0	28	106	Regular
	Rabab	0	96	106	Regular
	Gopichant	0	97	106	Regular
	Oud	0	98	106	Regular
	Shamisen	0	0	107	Regular
	Koto	0	0	108	Regular
	Taisho-kin	0	96	108	Regular
	Kanoon	0	97	108	Regular
	Kalimba	0	0	109	Regular

## Category: GM&amp;XG

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Ethnic	Bagpipe	0	0	110	Regular
	Fiddle	0	0	111	Regular
	Shanai	0	0	112	Regular
	Shanai2	0	64	112	Regular
	Pungi	0	96	112	Regular
	Hichiriki	0	97	112	Regular
Percussive	TinkleBell	0	0	113	Regular
	Bonang	0	96	113	Regular
	Altair	0	97	113	Regular
	GamelanGongs	0	98	113	Regular
	StereoGamlan	0	99	113	Regular
	RamaCymbal	0	100	113	Regular
	AsianBells	0	101	113	Regular
	Agogo	0	0	114	Regular
	SteelDrums	0	0	115	Regular
	GlassPerc.	0	97	115	Regular
	ThaiBells	0	98	115	Regular
	Woodblock	0	0	116	Regular
	Castanets	0	96	116	Regular
	TaikoDrum	0	0	117	Regular
	GranCassa	0	96	117	Regular
	MelodicTom	0	0	118	Regular
	MelodicTom2	0	64	118	Regular
	RealTom	0	65	118	Regular
	RockTom	0	66	118	Regular
	SynthDrum	0	0	119	Regular
AnalogTom	0	64	119	Regular	
ElectroPerc.	0	65	119	Regular	
Rev.Cymbal	0	0	120	Regular	
SoundEffect	GtrFretNoise	0	0	121	Regular
	BreathNoise	0	0	122	Regular
	Seashore	0	0	123	Regular
	BirdTweet	0	0	124	Regular
	TelephonRing	0	0	125	Regular
	Helicopter	0	0	126	Regular
	Applause	0	0	127	Regular
	Gunshot	0	0	128	Regular
	CuttingNoise	64	0	1	Regular
	CuttingNoiz2	64	0	2	Regular
	StringSlap	64	0	4	Regular
	Fl.KeyClick	64	0	17	Regular
	Shower	64	0	33	Regular
	Thunder	64	0	34	Regular
	Wind	64	0	35	Regular
	Stream	64	0	36	Regular
	Bubble	64	0	37	Regular
	Feed	64	0	38	Regular
	Dog	64	0	49	Regular
	Horse	64	0	50	Regular
	BirdTweet2	64	0	51	Regular
	Ghost	64	0	55	Regular
	Maou	64	0	56	Regular
	PhoneCall	64	0	65	Regular
	DoorSqueak	64	0	66	Regular
	DoorSlam	64	0	67	Regular
	ScratchCut	64	0	68	Regular
	ScratchSplit	64	0	69	Regular
	WindChime	64	0	70	Regular
	TelphonRing2	64	0	71	Regular
	CarEngineIgn	64	0	81	Regular
	CarTiresSqel	64	0	82	Regular
	CarPassing	64	0	83	Regular
	CarCrash	64	0	84	Regular
	Siren	64	0	85	Regular
	Train	64	0	86	Regular
	JetPlane	64	0	87	Regular
Starship	64	0	88	Regular	
Burst	64	0	89	Regular	
RollrCoaster	64	0	90	Regular	
Submarine	64	0	91	Regular	
Laugh	64	0	97	Regular	
Scream	64	0	98	Regular	
Punch	64	0	99	Regular	

**Category: GM&XG**

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
SoundEffect	Heartbeat	64	0	100	Regular
	FootSteps	64	0	101	Regular
	MachineGun	64	0	113	Regular
	LaserGun	64	0	114	Regular
	Explosion	64	0	115	Regular
	Firework	64	0	116	Regular

**Category: GM2**

Sub Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Piano	GrandPiano	121	0	1	Regular	
	GrandPianoW	121	1	1	Regular	
	GrandPianoD	121	2	1	Regular	
	BrightPiano	121	0	2	Regular	
	BrightPianoW	121	1	2	Regular	
	ElecGrandPno	121	0	3	Regular	
	ElecGrandPW	121	1	3	Regular	
	Honkytonk	121	0	4	Regular	
	HonkytonkW	121	1	4	Regular	
	El.Piano1	121	0	5	Regular	
	DetunedEP1	121	1	5	Regular	
	EP1VeloMix	121	2	5	Regular	
	60'sEl.Piano	121	3	5	Regular	
	El.Piano2	121	0	6	Regular	
	DetunedEP2	121	1	6	Regular	
	EP2VeloMix	121	2	6	Regular	
	EPLegend	121	3	6	Regular	
	EPPHase	121	4	6	Regular	
	Harpsichord	121	0	7	Regular	
	Harpsi.OctMx	121	1	7	Regular	
	HarpsichordW	121	2	7	Regular	
	Harpsi.KOff	121	3	7	Regular	
	Clavi.	121	0	8	Regular	
PulseClavi.	121	1	8	Regular		
ChromaticPerc	Celesta	121	0	9	Regular	
	Glockenspiel	121	0	10	Regular	
	MusicBox	121	0	11	Regular	
	Vibraphone	121	0	12	Regular	
	VibraphoneW	121	1	12	Regular	
	Marimba	121	0	13	Regular	
	MarimbaW	121	1	13	Regular	
	Xylophone	121	0	14	Regular	
	TubularBells	121	0	15	Regular	
	ChurchBells	121	1	15	Regular	
	Carillon	121	2	15	Regular	
	Dulcimer	121	0	16	Regular	
	Organ	DrawbarOrgan	121	0	17	Regular
		DetDrawOrgan	121	1	17	Regular
		It60'sOrgan	121	2	17	Regular
DrawbarOrg2		121	3	17	Regular	
Perc.Organ		121	0	18	Regular	
DetPercOrgan		121	1	18	Regular	
Perc.Organ2		121	2	18	Regular	
RockOrgan		121	0	19	Regular	
ChurchOrgan		121	0	20	Regular	
ChrchOrgOctM		121	1	20	Regular	
DetChurchOrg		121	2	20	Regular	
ReedOrgan		121	0	21	Regular	
PuffOrgan		121	1	21	Regular	
Accordion		121	0	22	Regular	
Accordion2		121	1	22	Regular	
Harmonica		121	0	23	Regular	
TangoAccord		121	0	24	Regular	
Guitar		NylonGuitar	121	0	25	Regular
		Ukulele	121	1	25	Regular
		NylonGtrKOff	121	2	25	Regular
	NylonGuitar2	121	3	25	Regular	
	SteelGuitar	121	0	26	Regular	
	12StrGuitar	121	1	26	Regular	
	Mandolin	121	2	26	Regular	
	Steel&Body	121	3	26	Regular	

**Category: GM2**

Sub Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Guitar	JazzGuitar	121	0	27	Regular	
	PedlSteelGtr	121	1	27	Regular	
	CleanGuitar	121	0	28	Regular	
	DetCleanGtr	121	1	28	Regular	
	MidToneGtr	121	2	28	Regular	
	MutedGuitar	121	0	29	Regular	
	FunkGuitar	121	1	29	Regular	
	MutedV-SwGtr	121	2	29	Regular	
	JazzMan	121	3	29	Regular	
	Overdriven	121	0	30	Regular	
	GuitarPinch	121	1	30	Regular	
	Distortion	121	0	31	Regular	
	FeedbackGtr	121	1	31	Regular	
	DstRhythmGtr	121	2	31	Regular	
	GtrHarmonics	121	0	32	Regular	
	GtrFeedback	121	1	32	Regular	
	Bass	AcousticBass	121	0	33	Regular
		FingerBass	121	0	34	Regular
		FingerSlap	121	1	34	Regular
		PickBass	121	0	35	Regular
FretlessBass		121	0	36	Regular	
SlapBass1		121	0	37	Regular	
SlapBass2		121	0	38	Regular	
SynthBass1		121	0	39	Regular	
WarmSyBass		121	1	39	Regular	
ResoSynhBass		121	2	39	Regular	
ClaviBass		121	3	39	Regular	
Hammer		121	4	39	Regular	
SynthBass2		121	0	40	Regular	
AttackBass		121	1	40	Regular	
RubberBass		121	2	40	Regular	
AttackPulse		121	3	40	Regular	
Strings		Violin	121	0	41	Regular
		SlwAtkViolin	121	1	41	Regular
		Viola	121	0	42	Regular
		Cello	121	0	43	Regular
	Contrabass	121	0	44	Regular	
	Trem.Strings	121	0	45	Regular	
	PizzicatoStr	121	0	46	Regular	
	Orch.Harp	121	0	47	Regular	
	YangQin	121	1	47	Regular	
	Timpani	121	0	48	Regular	
Ensemble	Strings1	121	0	49	Regular	
	StringsBrass	121	1	49	Regular	
	60'sStrings	121	2	49	Regular	
	Strings2	121	0	50	Regular	
	SynStrings1	121	0	51	Regular	
	SynStrings2	121	0	52	Regular	
	SynStrings3	121	1	51	Regular	
	ChoirAahs	121	0	53	Regular	
	ChoirAahs2	121	1	53	Regular	
	VoiceOohs	121	0	54	Regular	
	Humming	121	1	54	Regular	
	SynthVoice	121	0	55	Regular	
	AnalogVoice	121	1	55	Regular	
OrchestraHit	121	0	56	Regular		
Brass	BassHitPlus	121	1	56	Regular	
	6thHit	121	2	56	Regular	
	EuroHit	121	3	56	Regular	
	Trumpet	121	0	57	Regular	
	DarkTpSoft	121	1	57	Regular	
	Trombone	121	0	58	Regular	
	Trombone2	121	1	58	Regular	
	BriteTrombon	121	2	58	Regular	
	Tuba	121	0	59	Regular	
	MutedTrumpet	121	0	60	Regular	
	MuteTrumpet2	121	1	60	Regular	
	FrenchHorn	121	0	61	Regular	
	FrenchHorn2	121	1	61	Regular	
BrassSection	121	0	62	Regular		
BrassSect2	121	1	62	Regular		
SynthBrass1	121	0	63	Regular		
SynthBrass2	121	0	64	Regular		

## Category: GM2

Sub Category	Voice Name	Voice Number			Voice Type	
		MSB	LSB	Prg		
Brass	SynthBrass3	121	1	63	Regular	
	SynthBrass4	121	1	64	Regular	
	AnaSynBrass1	121	2	63	Regular	
	AnaSynBrass2	121	2	64	Regular	
	JumpBrass	121	3	63	Regular	
Reed	SopranoSax	121	0	65	Regular	
	AltoSax	121	0	66	Regular	
	TenorSax	121	0	67	Regular	
	BaritoneSax	121	0	68	Regular	
	Oboe	121	0	69	Regular	
	EnglishHorn	121	0	70	Regular	
	Bassoon	121	0	71	Regular	
	Clarinet	121	0	72	Regular	
	Piccolo	121	0	73	Regular	
Pipe	Flute	121	0	74	Regular	
	Recorder	121	0	75	Regular	
	PanFlute	121	0	76	Regular	
	BlownBottle	121	0	77	Regular	
	Shakuhachi	121	0	78	Regular	
	Whistle	121	0	79	Regular	
	Ocarina	121	0	80	Regular	
	Synth.Lead	SquareLead	121	0	81	Regular
		SquareLead2	121	1	81	Regular
		SineLead	121	2	81	Regular
SawtoothLead		121	0	82	Regular	
SawtoothLd2		121	1	82	Regular	
SawPulseLead		121	2	82	Regular	
DoublSawLead		121	3	82	Regular	
Seq.Analog		121	4	82	Regular	
CalliopeLead		121	0	83	Regular	
ChiffLead		121	0	84	Regular	
CharangLead		121	0	85	Regular	
WireLead		121	1	85	Regular	
VoiceLead		121	0	86	Regular	
FifthsLead		121	0	87	Regular	
Bass&Lead		121	0	88	Regular	
SoftWhirl	121	1	88	Regular		
Synth.Pad	NewAgePad	121	0	89	Regular	
	WarmPad	121	0	90	Regular	
	SinePad	121	1	90	Regular	
	PolySynthPad	121	0	91	Regular	
	ChoirPad	121	0	92	Regular	
	ItopiaPad	121	1	92	Regular	
	BowedPad	121	0	93	Regular	
	MetallicPad	121	0	94	Regular	
	HaloPad	121	0	95	Regular	
	SweepPad	121	0	96	Regular	
	Synth.Effect	Rain	121	0	97	Regular
SoundTrack		121	0	98	Regular	
Crystal		121	0	99	Regular	
SynthMallet		121	1	99	Regular	
Atmosphere		121	0	100	Regular	
Brightness		121	0	101	Regular	
Goblins		121	0	102	Regular	
Echoes		121	0	103	Regular	
EchoBell		121	1	103	Regular	
EchoPan		121	2	103	Regular	
Sci-Fi		121	0	104	Regular	
Ethnic		Sitar	121	0	105	Regular
		Sitar2	121	1	105	Regular
	Banjo	121	0	106	Regular	
	Shamisen	121	0	107	Regular	
	Koto	121	0	108	Regular	
	TaishoKoto	121	1	108	Regular	
	Kalimba	121	0	109	Regular	
	Bagpipe	121	0	110	Regular	
	Fiddle	121	0	111	Regular	
	Shanai	121	0	112	Regular	
Percussive	TinkleBell	121	0	113	Regular	
	Agogo	121	0	114	Regular	
	SteelDrums	121	0	115	Regular	
	Woodblock	121	0	116	Regular	
	Castanets	121	1	116	Regular	

## Category: GM2

Sub Category	Voice Name	Voice Number			Voice Type
		MSB	LSB	Prg	
Percussive	TaikoDrum	121	0	117	Regular
	ConcertBD	121	1	117	Regular
	MelodicTom	121	0	118	Regular
	MelodicTom2	121	1	118	Regular
	SynthDrum	121	0	119	Regular
	RhythmBoxTom	121	1	119	Regular
	ElectricDrum	121	2	119	Regular
	Rev.Cymbal	121	0	120	Regular
	SoundEffect	GtrFretNoise	121	0	121
GtrCutNoise		121	1	121	Regular
StringSlap		121	2	121	Regular
BreathNoise		121	0	122	Regular
Fl.KeyClick		121	1	122	Regular
Seashore		121	0	123	Regular
Rain		121	1	123	Regular
Thunder		121	2	123	Regular
Wind		121	3	123	Regular
Stream		121	4	123	Regular
Bubble		121	5	123	Regular
BirdTweet		121	0	124	Regular
Dog		121	1	124	Regular
HorseGallop		121	2	124	Regular
BirdTweet2		121	3	124	Regular
TelephonRing		121	0	125	Regular
TelRing2		121	1	125	Regular
DoorCreaking		121	2	125	Regular
Door		121	3	125	Regular
Scratch		121	4	125	Regular
WindChime		121	5	125	Regular
Helicopter		121	0	126	Regular
CarEngine		121	1	126	Regular
CarStop		121	2	126	Regular
CarPass		121	3	126	Regular
CarCrash		121	4	126	Regular
Siren		121	5	126	Regular
Train		121	6	126	Regular
Jetplane		121	7	126	Regular
Starship		121	8	126	Regular
BurstNoise		121	9	126	Regular
Applause		121	0	127	Regular
Laughing		121	1	127	Regular
Screaming	121	2	127	Regular	
Punch	121	3	127	Regular	
HeartBeat	121	4	127	Regular	
Footsteps	121	5	127	Regular	
Gunshot	121	0	128	Regular	
MachineGun	121	1	128	Regular	
Lasergun	121	2	128	Regular	
Explosion	121	3	128	Regular	
Drum	StandardSet	120	0	1	Drums
	RoomSet	120	0	9	Drums
	PowerSet	120	0	17	Drums
	ElectroSet	120	0	25	Drums
	AnalogSet	120	0	26	Drums
	JazzSet	120	0	33	Drums
	BrushSet	120	0	41	Drums
	OrchestraSet	120	0	49	Drums
	SFXSet	120	0	57	SFX

Program change numbers are often specified as numbers "0 -127." Since this list uses a "1 - 128" numbering system, in such cases it is necessary to subtract 1 from the transmitted program change numbers to select the appropriate sound: e.g. to select No. 2 in the list, transmit program change number 1.

# Mega Voice Map / Sound-Zuordnungen der Mega Voices / Carte des sonorités Mega Voice / Mapa de Mega Voice / Mapa de voz mega

MSB	PC# (1)	Voice Name	Velocity Switch Points (under B6)												above C6	above C8
8	0	Mega NylonGuitar	1-20 open soft	21-40 open med	41-60 open hard	61-75 dead	76-90 mute	91-105 hammer	106-120 slide	121-127 harmonics	1-127 strum noise	1-127 fret noise				
8	0	Mega SteelGuitar	1-20 open soft	21-40 open med	41-60 open hard	61-75 dead	76-90 mute	91-105 hammer	106-120 slide	121-127 harmonics	1-127 strum noise	1-127 fret noise				
8	0	Mega HiStringGtr	1-89 soft	1-71 soft	72-115 med	90-127 hard	116-127 hard	1-127 strum noise	1-127 fret noise							
8	1	Mega 12StringGtr Element1 (Steel)	1-89 soft	1-89 soft	1-89 soft	1-89 soft	1-89 soft	1-89 soft	1-89 soft	1-89 soft	1-89 soft	1-89 soft	1-89 soft	1-89 soft		
8	0	Mega CleanGuitar	1-20 open soft	21-40 open hard	41-60 slap	61-75 dead	76-90 mute	91-105 hammer	106-120 slide	121-127 pick harmonics	1-127 strum noise	1-127 fret noise				
8	1	Mega SolidGuitar1	1-20 open soft	21-40 open hard	41-60 slap	61-75 dead	76-90 mute	91-105 hammer	106-120 slide	121-127 pick harmonics	1-127 strum noise	1-127 fret noise				
8	2	Mega SolidGuitar2	1-20 open soft	21-40 open med	41-60 open hard	61-75 dead	76-90 mute	91-105 hammer	106-120 slide	121-127 pick harmonics	1-127 strum noise	1-127 fret noise				
8	3	Mega SingleCoil	1-20 open soft	21-40 open med	41-60 open hard	61-75 dead	76-90 mute	91-105 hammer	106-120 slide	121-127 pick harmonics	1-127 strum noise	1-127 fret noise				
8	0	Mega OverdriveGtr	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open		
8	0	Mega DistortionGtr	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open	1-55 open		
8	0	Mega JazzGuitar	1-20 open soft	21-40 open med	41-60 open hard	61-75 dead soft	76-90 dead hard	91-105 hammer	106-120 slide	121-127 pick harmonics	1-127 strum noise	1-127 fret noise				
8	0	Mega AcousticBass	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft		
8	0	Mega ElectricBass	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft		
8	1	Mega VintageRound	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft		
8	2	Mega VintageFlat	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft	1-60 open soft		
8	0	Mega PickBass	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open		
8	1	Mega VintagePick	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open	1-40 open		
8	0	Mega FretlessBass	1-80 open	1-80 open	1-80 open	1-80 open	1-80 open	1-80 open	1-80 open	1-80 open	1-80 open	1-80 open	1-80 open	1-80 open		
8	0	Mega SmallStrings	1-20 p	21-40 mf	41-60 f	61-80 legato	81-95 spicato f	96-110 spicato ff	111-120 tremolo	121-127 glissando down	1-127 strum noise	1-127 fret noise				
8	0	Mega LargeStrings	1-20 p	21-40 mf	41-60 f	61-80 legato	81-95 spicato f	96-110 spicato ff	111-120 tremolo	121-127 glissando down	1-127 strum noise	1-127 fret noise				
8	0	Mega Brass	1-20 p	21-40 mf	41-60 f	61-80 attack	81-90 scoops	91-100 shake	101-110 falls fast mf	121-127 glissando up	1-127 strum noise	1-127 fret noise				
8	0	Mega Trumpet	1-20 mf	21-40 f	41-60 ff	61-80 legato	81-100 straight	101-110 shake	111-120 falls	121-127 glissando up	1-127 strum noise	1-127 fret noise				
8	0	Mega TenorSax	1-20 mp	21-40 mf	41-60 f	61-80 legato	81-100 growl	101-110 shake	111-120 falls	121-127 glissando up	1-127 strum noise	1-127 fret noise				

# Drum/key Assignment List / Liste der Tastenzuordnungen der Schlaginstrumente / Liste des affectations d'instrument de batterie/touche de clavier / Lista de asignación de teclas/batería / Lista de atribuições de bateria/tecla

Kit Name			Standard Kit 1			Standard Kit 2			Hit Kit			Room Kit			Rock Kit		
MSB-LSB-PC#(0)			127-0-0			127-0-1			127-0-4			127-0-8			127-0-16		
Note#	MIDI Note	Keyboard Note	FullName	Key Off (*1)	Alt Grp (*2)	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp
13	C#-1	C#1	Surdo Mute		3												
14	D-1	D1	Surdo Open		3												
15	D#-1	D#1	Hi Q														
16	E-1	E1	Whip Slap														
17	F-1	F1	Scratch H		4												
18	F#-1	F#1	Scratch L		4												
19	G-1	G1	Finger Snap														
20	G#-1	G#1	Click Noise														
21	A-1	A1	Metronome Click														
22	A#-1	A#1	Metronome Bell														
23	B-1	B1	Seq Click L														
24	C0	C2	Seq Click H														
25	C#0	C#2	Brush Tap														
26	D0	D2	Brush Swirl	●													
27	D#0	D#2	Brush Slap														
28	E0	E2	Brush Tap Swirl	●													
29	F0	F2	Snare Roll	●													
30	F#0	F#2	Castanet														
31	G0	G2	Snare Soft			Snare Soft 2			Snare Electro						Snare Noisy		
32	G#0	G#2	Sticks														
33	A0	A2	Kick Soft						Kick Tight L								
34	A#0	A#2	Open Rim Shot			Open Rim Shot H Short			Snare Pitched								
35	B0	B2	Kick Tight						Kick Wet						Kick 2		
36	C1	C3	Kick			Kick Short			Kick Tight H						Kick Gate		
37	C#1	C#3	Side Stick			Side Stick Light			Stick Ambient								
38	D1	D3	Snare			Snare Short			Snare Ambient			Snare Snappy			Snare Rock		
39	D#1	D#3	Hand Clap														
40	E1	E3	Snare Tight			Snare Tight H			Snare Tight 2			Snare Tight Snappy			Snare Rock Tight		
41	F1	F3	Floor Tom L						Hybrid Tom 1			Tom Room 1			Tom Rock 1		
42	F#1	F#3	Hi-Hat Closed		1				Hi-Hat Closed 2		1						
43	G1	G3	Floor Tom H						Hybrid Tom 2			Tom Room 2			Tom Rock 2		
44	G#1	G#3	Hi-Hat Pedal		1				Hi-Hat Pedal 2		1						
45	A1	A3	Low Tom						Hybrid Tom 3			Tom Room 3			Tom Rock 3		
46	A#1	A#3	Hi-Hat Open		1				Hi-Hat Open 2		1						
47	B1	B3	Mid Tom L						Hybrid Tom 4			Tom Room 4			Tom Rock 4		
48	C2	C4	Mid Tom H						Hybrid Tom 5			Tom Room 5			Tom Rock 5		
49	C#2	C#4	Crash Cymbal 1														
50	D2	D4	High Tom						Hybrid Tom 6			Tom Room 6			Tom Rock 6		
51	D#2	D#4	Ride Cymbal 1														
52	E2	E4	Chinese Cymbal														
53	F2	F4	Ride Cymbal Cup														
54	F#2	F#4	Tambourine						Tambourine Light								
55	G2	G4	Splash Cymbal														
56	G#2	G#4	Cowbell														
57	A2	A4	Crash Cymbal 2														
58	A#2	A#4	Vibraslap														
59	B2	B4	Ride Cymbal 2														
60	C3	C5	Bongo H														
61	C#3	C#5	Bongo L														
62	D3	D5	Conga H Mute														
63	D#3	D#5	Conga H Open														
64	E3	E5	Conga L														
65	F3	F5	Timbale H														
66	F#3	F#5	Timbale L														
67	G3	G5	Agogo H														
68	G#3	G#5	Agogo L														
69	A3	A5	Cabasa														
70	A#3	A#5	Maracas														
71	B3	B5	Samba Whistle H	●													
72	C4	C6	Samba Whistle L	●													
73	C#4	C#6	Guiro Short														
74	D4	D6	Guiro Long	●													
75	D#4	D#6	Claves														
76	E4	E6	Wood Block H														
77	F4	F6	Wood Block L														
78	F#4	F#6	Cuica Mute														
79	G4	G6	Cuica Open														
80	G#4	G#6	Triangle Mute		2												
81	A4	A6	Triangle Open		2												
82	A#4	A#6	Shaker														
83	B4	B6	Jingle Bells														
84	C5	C7	Bell Tree														
85	C#5	C#7															
86	D5	D7															
87	D#5	D#7															
88	E5	E7															
89	F5	F7															
90	F#5	F#7															
91	G5	G7															

Same as Standard Kit 1

\*1 Key Off: Keys marked "●" stop sounding the instant they are released.

\*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

No Sound

Kit Name			Electro Kit			Analog Kit			Dance Kit			Jazz Kit			Brush Kit		
MSB-LSB-PC#(0)			127-0-24			127-0-25			127-0-27			127-0-32			127-0-40		
Note#	MIDI Note	Keyboard Note	FullName	Key Off (*1)	Alt Grp (*2)	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp
13	C#-1	C#1							Kick Dance 1								
14	D-1	D1							Kick Dance 2								
15	D#-1	D#1															
16	E-1	E1															
17	F-1	F1							Scratch Dance 1	●							
18	F#-1	F#1							Scratch Dance 2	●							
19	G-1	G1															
20	G#-1	G#1															
21	A-1	A1							Dance Perc 1								
22	A#-1	A#1							Reverse Dance 1								
23	B-1	B1							Dance Perc 2								
24	C0	C2							Hi Q Dance 1								
25	C#0	C#2							Snare Analog 3								
26	D0	D2							Vinyl Noise	●							
27	D#0	D#2							Snare Analog 4								
28	E0	E2	Reverse Cymbal	●		Reverse Cymbal	●		Reverse Cymbal	●							
29	F0	F2							Reverse Dance 2	●							
30	F#0	F#2	Hi Q 2			Hi Q 2			Hi Q 2								
31	G0	G2	Snare Snappy Electro			Snare Noisy 4			Snare Techno			Snare Jazz H			Brush Slap 2		
32	G#0	G#2							Snare Dance 1								
33	A0	A2	Kick 3			Kick 3			Kick Techno Q								
34	A#0	A#2							Rim Gate								
35	B0	B2	Kick Gate			Kick Analog Short			Kick Techno L								
36	C1	C3	Kick Gate Heavy			Kick Analog			Kick Techno			Kick Jazz			Kick Jazz		
37	C#1	C#3				Side Stick Analog			Side Stick Analog			Side Stick Light			Side Stick Light		
38	D1	D3	Snare Noisy 2			Snare Analog			Snare Clap			Snare Jazz L			Brush Slap 3		
39	D#1	D#3							Dance Clap								
40	E1	E3	Snare Noisy 3			Snare Analog 2			Snare Dry			Snare Jazz M			Brush Tap 2		
41	F1	F3	Tom Electro 1			Tom Analog 1			Tom Dance 1						Tom Brush 1		
42	F#1	F#3				Hi-Hat Closed Analog	1		Hi-Hat Closed 3		1						
43	G1	G3	Tom Electro 2			Tom Analog 2			Tom Dance 2						Tom Brush 2		
44	G#1	G#3				Hi-Hat Closed Analog 2	1		Hi-Hat Closed Analog 3		1						
45	A1	A3	Tom Electro 3			Tom Analog 3			Tom Dance 3						Tom Brush 3		
46	A#1	A#3				Hi-Hat Open Analog	1		Hi-Hat Open 3		1						
47	B1	B3	Tom Electro 4			Tom Analog 4			Tom Dance 4						Tom Brush 4		
48	C2	C4	Tom Electro 5			Tom Analog 5			Tom Dance 5						Tom Brush 5		
49	C#2	C#4				Crash Analog			Crash Analog								
50	D2	D4	Tom Electro 6			Tom Analog 6			Tom Dance 6						Tom Brush 6		
51	D#2	D#4															
52	E2	E4															
53	F2	F4															
54	F#2	F#4							Tambourine Analog								
55	G2	G4															
56	G#2	G#4				Cowbell Analog			Cowbell Dance								
57	A2	A4															
58	A#2	A#4							Vibrastap Analog								
59	B2	B4							Ride Analog								
60	C3	C5							Bongo Analog H								
61	C#3	C#5							Bongo Analog L								
62	D3	D5				Conga Analog H			Conga Analog H								
63	D#3	D#5				Conga Analog M			Conga Analog M								
64	E3	E5				Conga Analog L			Conga Analog L								
65	F3	F5															
66	F#3	F#5															
67	G3	G5															
68	G#3	G#5															
69	A3	A5															
70	A#3	A#5				Maracas 2			Maracas 2								
71	B3	B5															
72	C4	C6															
73	C#4	C#6															
74	D4	D6															
75	D#4	D#6				Claves 2			Claves 2								
76	E4	E6							Dance Perc 3								
77	F4	F6							Dance Perc 4	●							
78	F#4	F#6	Scratch H 2			Scratch H 2			Dance Breath 1								
79	G4	G6	Scratch L 2			Scratch L 2			Dance Breath 2	●							
80	G#4	G#6															
81	A4	A6															
82	A#4	A#6															
83	B4	B6															
84	C5	C7															
85	C#5	C#7															
86	D5	D7															
87	D#5	D#7															
88	E5	E7															
89	F5	F7															
90	F#5	F#7															
91	G5	G7															

Same as Standard Kit 1

\*1 Key Off: Keys marked "●" stop sounding the instant they are released.

\*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

No Sound



Kit Name			Symphony Kit			HipHop Kit			Break Kit			Analog T8 Kit			Analog T9 Kit		
MSB-LSB-PC#(0)			127-0-48			127-0-56			127-0-57			127-0-58			127-0-59		
Note#	MIDI Note	Keyboard Note	FullName	Key Off (*1)	Alt Grp (*2)	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp
13	C#-1	C#1															
14	D-1	D1															
15	D#-1	D#1															
16	E-1	E1															
17	F-1	F1															
18	F#-1	F#1															
19	G-1	G1				Hi-Hat Closed T8 2		4				Snare Hammer			Snare Drum&Bass 1		
20	G#-1	G#1				Tom T8 3			Snare Break 8			Kick Zap Hard			Kick Break 2		
21	A-1	A1				Hi-Hat Open T8 2		4	Snare Break 9			Snare Garg L			Snare Distortion		
22	A#-1	A#1				Tom T8 6			Hi-Hat Closed Break 1	●		Kick Tek Power			Kick Tek Power		
23	B-1	B1				Crash T8			Hi-Hat Closed Break 2	●		Kick Slimy			Kick Distortion RM		
24	C0	C2				Triangle Mute		1	Kick Break Deep			Kick T8 4			Kick T9 2		
25	C#0	C#2				Triangle Open		1	Snare Hip			Snare Analog CR			Snare Analog CR		
26	D0	D2				Wind Chime			Snare Lo-Fi			Snare T8 7			Snare T9 5		
27	D#0	D#2				Tambourine Light 2			Snare Clappy			Snare Clap Analog			Clap Analog Sm		
28	E0	E2				Tambourine Light 1			Snare LdwH Mono			Snare T8 6			Snare T9 Gate 1		
29	F0	F2				Kick HipHop 9			Snare Rock Roll	●		Tom T8 5			Snare Rock Roll	●	
30	F#0	F#2				Hi-Hat Closed Tek		3	Snare Gate 1			Snare T8 5			Snare T9 3		
31	G0	G2				Kick Gate			Snare Mid			Kick T8 3			Snare T9 4		
32	G#0	G#2				Hi-Hat Open Lo-Fi		3	Snare Break Rim			Snare T8 4			Snare T9 Gate 2		
33	A0	A2	Kick Soft 2			Kick Gran Casa Open			Kick Break Heavy			Kick T8 2			Kick T9 4		
34	A#0	A#2				Hi-Hat Reverse Drum&Bass			Snare Hip Rim 4			Snare T8 3			Snare T9 6		
35	B0	B2	Gran Cassa			Kick HipHop 1			Kick Break 2			T8 Kick Bass			Kick T9 1		
36	C1	C3	Gran Cassa Mute			Kick Analog CR			Kick Break 1			Kick T8 1			Kick T9 3		
37	C#1	C#3				Snare Analog Sm Rim			Snare Hip Rim 1			Snare T8 Rim			Snare T9 Rim		
38	D1	D3	Band Snare			Snare HipHop 1			Snare Break 3			Snare T8 2			Snare T9 1		
39	D#1	D#3				Snare Clappy			Snare Break 1			Clap T9			Clap T9		
40	E1	E3	Band Snare 2			Snare HipHop 2			Snare Break 2			Snare T8 1			Snare T9 2		
41	F1	F3							Tom Break 1			Tom T8 1			Tom T9 1		
42	F#1	F#3				Hi-Hat Closed HipHop		2	Hi-Hat Closed Rock Soft		1	Hi-Hat Closed T8		1	Hi-Hat Closed T9		1
43	G1	G3				Low Tom			Tom Break 2			Tom T8 2			Tom T9 2		
44	G#1	G#3				Hi-Hat Pedal HipHop		2	Hi-Hat Pedal Rock		1	Hi-Hat Pedal T8		1	Hi-Hat Pedal T9		1
45	A1	A3				Mid Tom L			Tom Break 3			Tom T8 3			Tom T9 3		
46	A#1	A#3				Hi-Hat Open HipHop		2	Hi-Hat Half Open Rock		1	Hi-Hat Open T8		1	Hi-Hat Open T9		1
47	B1	B3				High Tom			Tom Break 4			Tom T8 4			Tom T9 4		
48	C2	C4				Ride Cymbal 3			Tom Break 5			Tom T8 6			Tom T9 5		
49	C#2	C#4	Hand Cymbal			Crash Cymbal 3						Crash Cymbal T8			Crash Cymbal T9		
50	D2	D4				Shaker 2			Tom Break 6			Tom T8 7			Tom T9 6		
51	D#2	D#4	Hand Cymbal Short			Scratch Bass Drum Forward			Ride Cymbal 3			Ride Cymbal T9			Ride Cymbal T9		
52	E2	E4				Scratch Bass Drum Reverse			China Cymbal 2			China Cymbal 2			China Cymbal 2		
53	F2	F4				Kick HipHop 2			Ride Cymbal Cup 2			Ride Cymbal Cup 2			Ride Cymbal Cup 2		
54	F#2	F#4				Snare HipHop Rim 2			Tambourine 1 Hit			Tambourine RX5			Tambourine RX5		
55	G2	G4				HipHop Clap 2			Splash Cymbal 2						Splash Cymbal 2		
56	G#2	G#4				HipHop Snap 1			Cowbell 1			Cowbell T8			Cowbell 1		
57	A2	A4	Hand Cymbal 2			Snare HipHop 3						Crash Cymbal 4			Crash Cymbal 4		
58	A#2	A#4				Electric Clap 2			Cowbell RX11						Cowbell T8		
59	B2	B4	Hand Cymbal Short 2			Kick Hip Deep						Ride Cymbal 3			Ride Cymbal 3		
60	C3	C5				Kick HipHop 3						Conga T8 5			Conga T8 5		
61	C#3	C#5				Snare HipHop Rim 3						Conga T8 4			Conga T8 4		
62	D3	D5				Snare HipHop 5			Conga H Tip			Conga T8 3			Conga Tip		
63	D#3	D#5				Electric Clap 1			Conga H Open Slap			Conga T8 2			Conga Open Slap		
64	E3	E5				Handbell H			Conga H Open			Conga T8 1			Conga Open		
65	F3	F5				Kick HipHop 4			Bongo 2 H								
66	F#3	F#5				HipHop Clap 3			Bongo 2 L								
67	G3	G5				HipHop Snap 2			Conga Open			Glass H			Analog Click		
68	G#3	G#5				Snare HipHop Rim 5						Glass L			Conga T8 1		
69	A3	A5				HipHop Flex 1											
70	A#3	A#5				HipHop Flex 2			Maracas Slur			Maracas T8			Maracas Slur 2		
71	B3	B5				Shaker 2			Timbale H			Fx Gun 2	●		Fx Gun 2	●	
72	C4	C6				Kick HipHop 5			Timbale L			Fx Gun 1	●		Fx Gun 1	●	
73	C#4	C#6				Snare HipHop Rim 4			Scratch H 3	●		Analog Shaker H	●		Scratch H 3	●	
74	D4	D6				Snare HipHop 6			Scratch Down	●		Analog Shaker L	●		Scratch Down	●	
75	D#4	D#6				Snare HipHop 11						Claves T8			Hi Q 3		
76	E4	E6				Kick HipHop 10						Hi Q 1			Hi Q 1		
77	F4	F6				Snare HipHop 7						Hi Q 2			Hi Q 2		
78	F#4	F#6				HipHop Clap 5			Scratch H 2			Scratch H 2			Scratch H 2		
79	G4	G6				Conga H Tip			Scratch L 2			Scratch L 2			Scratch L 2		
80	G#4	G#6				Conga H Heel											
81	A4	A6				Conga H Open											
82	A#4	A#6				Conga L Open 1			Kick Break 3			Analog Shaker			Analog Shaker		
83	B4	B6				Conga L Open 2			Kick Break 4			Sleigh Bells					
84	C5	C7				Kick HipHop 8			Kick Break 5	●		Wind Chime			Wind Chime		
85	C#5	C#7				HipHop Clap 6			Kick Break 6			Snare Hip 1			Snare Piccolo		
86	D5	D7				Snare T8 1			Kick Break 7			Snare Hip 2			Snare T8 7		
87	D#5	D#7				Snare T8 1 H			Hi-Hat Closed Break 3			Snare Hip Gate			SnareRockRollDist		
88	E5	E7				HipHop Clap 7			Snare Break 4			Snare Break 1			Snare Brush Mute		
89	F5	F7				Tom T8 1			Snare Break 5			Kick Blip			Kick Blip Hard		
90	F#5	F#7				Hi-Hat Closed T8 2			Snare Break 6			Snare Fx 1			Snare Jungle 1		
91	G5	G7				Tom T8 2			Snare Break 7			Kick Fx Hammer			Kick Sustain		

Same as Standard Kit 1

\*1 Key Off: Keys marked "●" stop sounding the instant they are released.

\*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

No Sound

Kit Name			House Kit			Studio Kit			Power Kit 1			Power Kit 2			Acoustic Kit		
MSB-LSB-PC#(0)			127-0-60			127-0-86			127-0-87			127-0-88			127-0-89		
Note#	MIDI Note	Keyboard Note	FullName	Key Off (*1)	Alt Grp (*2)	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp
13	C#-1	C#1	W Kick	●													
14	D-1	D1	Disco Fx	●													
15	D#-1	D#1	White Noise Down 1	●													
16	E-1	E1	Pink Noise Down 1	●													
17	F-1	F1	White Noise Down 2	●	4												
18	F#-1	F#1	Pink Noise Down 2	●	4												
19	G-1	G1	White Noise Up 2	●													
20	G#-1	G#1	White Noise Up 1	●													
21	A-1	A1	Pink Noise Up	●													
22	A#-1	A#1	White Noise Up Release	●													
23	B-1	B1	Pink Noise Up Release	●													
24	C0	C2	Kick T9 4														
25	C#0	C#2	Snare T8 Rim														
26	D0	D2	Snare T8 5														
27	D#0	D#2	Hand Clap														
28	E0	E2	Snare Garg L														
29	F0	F2															
30	F#0	F#2	Snare T9 3												Snare Roll Acoustic	●	
31	G0	G2	Snare T8 1			Snare Studio 2			Snare Soft Power 1			Snare Soft Power 2			Snare Soft Acoustic		
32	G#0	G#2	Snare T9 5														
33	A0	A2	Kick T9 1			Kick Ambience H			Kick Ambient+			Kick Ambient+			Kick Soft Acoustic		
34	A#0	A#2	Snare T9 Gate						Open Rim Power 1			Open Rim Power 2			Rim Acoustic		
35	B0	B2	Kick T9 2			Kick Ambience L			Kick Power Open			Kick Power Open			Kick Mute Acoustic		
36	C1	C3	Kick T9 5			Kick Studio			Kick Power Mute			Kick Power Mute			Kick Open Acoustic		
37	C#1	C#3	Snare T9 Rim						Side Stick Power			Side Stick Power			Stick Acoustic		
38	D1	D3	Snare T9 1			Snare Studio M			Snare Power 1			Snare Power 2			Snare Acoustic		
39	D#1	D#3	Clap T9						Hand Clap Power			Hand Clap Power			Hand Clap Power		
40	E1	E3	Snare T9 2			Snare Studio L			Snare Loose			Snare Loose			Snare Rough Acoustic		
41	F1	F3	Tom T9 1						Tom Power 1			Tom Power 1			Tom Acoustic 1		
42	F#1	F#3	Hi-Hat Closed T8		1				Hi-Hat Closed Power	1		Hi-Hat Closed Power+Edge	1		Hi-Hat Closed Acoustic	1	
43	G1	G3	Tom T9 2						Tom Power 2			Tom Power 2			Tom Acoustic 2		
44	G#1	G#3	Hi-Hat Pedal T9		1				Hi-Hat Pedal Power	1		Hi-Hat Pedal Power	1		Hi-Hat Pedal Acoustic	1	
45	A1	A3	Tom T9 3						Tom Power 3			Tom Power 3			Tom Acoustic 3		
46	A#1	A#3	Hi-Hat Open T9		1				Hi-Hat Open Power	1		Hi-Hat Open Power	1		Hi-Hat Open Acoustic	1	
47	B1	B3	Tom T9 4						Tom Power 4			Tom Power 4			Tom Acoustic 4		
48	C2	C4	Tom T9 5						Tom Power 5			Tom Power 5			Tom Acoustic 5		
49	C#2	C#4	Crash Cymbal T9						Crash Cymbal Acoustic 1			Crash Cymbal Acoustic 1			Crash Cymbal Acoustic 1		
50	D2	D4	Tom T9 6						Tom Power 6			Tom Power 6			Tom Acoustic 6		
51	D#2	D#4	Ride Cymbal T9						Ride Cymbal Acoustic 1			Ride Cymbal Acoustic 1			Ride Cymbal Acoustic 1		
52	E2	E4	Crash Cymbal 4						China Cymbal Acoustic			China Cymbal Acoustic			China Cymbal Acoustic		
53	F2	F4	Ride Cymbal Cup 2						Ride Cymbal Cup Acoustic			Ride Cymbal Cup Acoustic			Ride Cymbal Cup Acoustic		
54	F#2	F#4	Tambourine Hit														
55	G2	G4	Splash Cymbal 2						Splash Cymbal Acoustic			Splash Cymbal Acoustic			Splash Cymbal Acoustic		
56	G#2	G#4	Cowbell 1														
57	A2	A4							Crash Cymbal Acoustic 2			Crash Cymbal Acoustic 2			Crash Cymbal Acoustic 2		
58	A#2	A#4	Cowbell T8														
59	B2	B4	Ride Cymbal 3						Ride Cymbal Acoustic 2			Ride Cymbal Acoustic 2			Ride Cymbal Acoustic 2		
60	C3	C5	Bongo H Open One Finger														
61	C#3	C#5	Bongo L Open Three Finger														
62	D3	D5	Conga H Tip														
63	D#3	D#5	Conga H Slap Open														
64	E3	E5	Conga H Open 2														
65	F3	F5															
66	F#3	F#5															
67	G3	G5															
68	G#3	G#5															
69	A3	A5															
70	A#3	A#5	Maracas Slur 2														
71	B3	B5	Vox Drum L														
72	C4	C6	Vox Drum H														
73	C#4	C#6															
74	D4	D6															
75	D#4	D#6															
76	E4	E6															
77	F4	F6															
78	F#4	F#6	Cuica H														
79	G4	G6	Cuica L														
80	G#4	G#6															
81	A4	A6															
82	A#4	A#6	Analog Shaker														
83	B4	B6															
84	C5	C7	Wind Chime						Wind Chime			Wind Chime			Wind Chime		
85	C#5	C#7	Snare Break Roll														
86	D5	D7	Noise Burst														
87	D#5	D#7	Vox Bell														
88	E5	E7	Snare R&B 1														
89	F5	F7	Vox Alk														
90	F#5	F#7	Udu High														
91	G5	G7	Filter Kick														

Same as Standard Kit 1

\*1 Key Off: Keys marked "●" stop sounding the instant they are released.

\*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

No Sound

Kit Name			Rock Kit			Real Drums			SFX Kit 1 (*)			SFX Kit 2 (*)			Noises Kit (*)		
MSB-LSB-PC#(0)			127-0-90			127-0-91			126-0-0			126-0-1			126-0-8		
Note#	MIDI Note	Keyboard Note	FullName	Key Off (*1)	Alt Grp (*2)	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp
13	C#-1	C#1															
14	D-1	D1															
15	D#-1	D#1															
16	E-1	E1															
17	F-1	F1															
18	F#-1	F#1															
19	G-1	G1															
20	G#-1	G#1															
21	A-1	A1															
22	A#-1	A#1															
23	B-1	B1															
24	C0	C2															
25	C#0	C#2															
26	D0	D2				Brush Tap Swirl	●										
27	D#0	D#2															
28	E0	E2															
29	F0	F2	Snare Roll Rock	●		Snare Roll Rock	●										
30	F#0	F#2															
31	G0	G2	Snare Soft Rock			Snare Tight											
32	G#0	G#2															
33	A0	A2	Kick Soft Rock			Kick Genuine											
34	A#0	A#2	Rim Rock			Rim Real											
35	B0	B2	Kick Rock Heavy			Kick Real 1											
36	C1	C3	Kick Rock			Kick Real 2			Cutting Noise 1	●		Phone Call	●		White Noise	●	
37	C#1	C#3	Stick Rock			Stick Real			Cutting Noise 2	●		Door Squeak	●		Pink Noise	●	
38	D1	D3	Snare Rock			Snare Real 1						Door Slam	●		White Noise Down 1	●	
39	D#1	D#3	Hand Clap Power			Clap Power			String Slap	●		Scratch Cut	●		Pink Noise Down 1	●	
40	E1	E3	Snare Dry Rock			Snare Real 2						Scratch Split	●		White Noise Down 2	●	
41	F1	F3	Tom Rock 1			Tom Real 1						Wind Chime	●		Pink Noise Down 2	●	
42	F#1	F#3	Hi-Hat Closed Rock		1	Hi-Hat Closed Real		1				Telephone Ring	●		White Noise Up 2	●	
43	G1	G3	Tom Rock 2			Tom Real 2									White Noise Up 1	●	
44	G#1	G#3	Hi-Hat Pedal Rock		1	Hi-Hat Pedal Real		1							Pink Noise Up	●	
45	A1	A3	Tom Rock 3			Tom Real 3									White Noise Up Release	●	
46	A#1	A#3	Hi-Hat Open Rock		1	Hi-Hat Open Real		1							Pink Noise Up Release	●	
47	B1	B3	Tom Rock 4			Tom Real 4									White Noise Up LFO	●	
48	C2	C4	Tom Rock 5			Tom Real 5									Pink Noise Up LFO	●	
49	C#2	C#4	Crash Cymbal Acoustic 1			Crash Cymbal Real 1											
50	D2	D4	Tom Rock 6			Tom Real 6											
51	D#2	D#4	Ride Cymbal Acoustic 1			Ride Cymbal Real 1											
52	E2	E4	China Cymbal Acoustic			China Cymbal Real			Flute Key Click	●		Car Engine Ignition	●				
53	F2	F4	Ride Cymbal Cup Acoustic			Ride Cymbal Cup Real						Car Tires Squeal	●				
54	F#2	F#4										Car Passing	●				
55	G2	G4	Splash Cymbal Acoustic			Splash Cymbal Real						Car Crash	●				
56	G#2	G#4										Siren	●				
57	A2	A4	Crash Cymbal Acoustic 2			Crash Cymbal Real 2						Train	●				
58	A#2	A#4										Jet Plane	●				
59	B2	B4	Ride Cymbal Acoustic 2			Ride Cymbal Real 2						Starship	●				
60	C3	C5										Burst	●				
61	C#3	C#5										Roller Coaster	●				
62	D3	D5										Submarine	●				
63	D#3	D#5															
64	E3	E5															
65	F3	F5															
66	F#3	F#5															
67	G3	G5															
68	G#3	G#5							Shower	●		Laugh	●				
69	A3	A5							Thunder	●		Scream	●				
70	A#3	A#5							Wind	●		Punch	●				
71	B3	B5							Stream	●		Heart Beat	●				
72	C4	C6							Bubble	●		Foot Steps	●				
73	C#4	C#6							Feed	●							
74	D4	D6															
75	D#4	D#6															
76	E4	E6															
77	F4	F6															
78	F#4	F#6															
79	G4	G6															
80	G#4	G#6															
81	A4	A6															
82	A#4	A#6															
83	B4	B6															
84	C5	C7	Wind Chime			Wind Chime			Dog	●		Machine Gun	●				
85	C#5	C#7							Horse	●		Laser Gun	●				
86	D5	D7							Bird Tweet	●		Explosion	●				
87	D#5	D#7										Firework	●				
88	E5	E7															
89	F5	F7															
90	F#5	F#7							Ghost	●							
91	G5	G7							Maou	●							

Same as Standard Kit 1

\*1 Key Off: Keys marked "●" stop sounding the instant they are released.

\*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

\* Actual Keyboard Notes are one octave lower than the ones described in the above list.

No Sound

Kit Name			Arabic Kit			Cuban Kit			Pop Latin Kit			Turkish Kit		
MSB-LSB-PC#(0)			126-0-35			126-0-40			126-0-43			126-0-67		
Note#	MIDI Note	Keyboard Note	FullName	Key Off (*1)	Alt Grp (*2)	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp	FullName	Key Off	Alt Grp
13	C#-1	C#1							Cajon Low			Asma Davul Left Side		
14	D-1	D1							Cajon Slap			Asma Davul Right Side		
15	D#-1	D#1							Cajon Tip			Asma Davul Side Body		
16	E-1	E1							Claves High			Asma Davul Both Sides		
17	F-1	F1							Claves Low			Koltuk Davul Flam		
18	F#-1	F#1							Hand Clap			Koltuk Davul Teke		
19	G-1	G1										Koltuk Davul Tek		
20	G#-1	G#1							Finger Snap			Koltuk Davul Dum		
21	A-1	A1							Castanet			Bendir Teke Flam		
22	A#-1	A#1				Conga H Tip			Conga H Tip			Bendir Teke Dead		
23	B-1	B1				Conga H Heel			Conga H Heel			Bendir Tek Dead		
24	C0	C2	Nakarazan Dom			Conga H Open			Conga H Open			Bendir Teke		
25	C#0	C#2	Cabasa			Conga H Mute			Conga H Mute			Bendir Tek		
26	D0	D2	Nakarazan Edge			Conga H Slap Open			Conga H Slap Open			Bendir Slap		2
27	D#0	D#2	Hager Dom			Conga H Slap			Conga H Slap			Bendir Dum		2
28	E0	E2	Hager Edge			Conga H Slap Mute			Conga H Slap Mute			Zil Right Close		3
29	F0	F2	Bongo H			Conga L Tip			Conga L Tip			Zil Right Open		3
30	F#0	F#2	Bongo L			Conga L Heel			Conga L Heel			Zil Left Close		4
31	G0	G2	Conga H Mute			Conga L Open			Conga L Open			Zil Left Open		4
32	G#0	G#2	Conga H Open			Conga L Mute			Conga L Mute			Tef Teke Flam		5
33	A0	A2	Conga L			Conga L Slap Open			Conga L Slap Open			Tef Tek Mute		5
34	A#0	A#2	Zagrouda H			Conga L Slap			Conga L Slap			Tef Teke Damped		
35	B0	B2	Zagrouda L	●		Conga L Slide	●		Conga L Slide	●		Tef Tek Mute Medium		
36	C1	C3	Kick Soft			Bongo H Open One Finger			Bongo H Open One Finger			Tef Dum Mute		
37	C#1	C#3	Side Stick			Bongo H Open Three Finger			Bongo H Open Three Finger			Tef Cymbal		9
38	D1	D3	Snare Soft			Bongo H Rim			Bongo H Rim			Tef Cymbal Mute		9
39	D#1	D#3	Arabic Hand Clap			Bongo H Tip			Bongo H Tip			Tef Tremolo	●	
40	E1	E3	Snare Drum			Bongo H Heel			Bongo H Heel			Tef Shake 1		
41	F1	F3	Floor Tom L			Bongo H Slap			Bongo H Slap			Tef Shake 2		
42	F#1	F#3	Hi-Hat Closed		1	Bongo L Open One Finger			Bongo L Open One Finger			Tef Tek Flam		
43	G1	G3	Floor Tom H			Bongo L Open Three Finger			Bongo L Open Three Finger			Tef Full Open		
44	G#1	G#3	Hi-Hat Pedal		1	Bongo L Rim			Bongo L Rim			Tef Teke Open Short		
45	A1	A3	Low Tom			Bongo L Tip			Bongo L Tip			Tef Tek Open Short		
46	A#1	A#3	Hi-Hat Open		1	Bongo L Heel			Bongo L Heel			Tef Tek Open		
47	B1	B3	Mid Tom L			Bongo L Slap			Bongo L Slap			Tef Dum Open		
48	C2	C4	Mid Tom H			Timbale L			Timbale L			Hollo Finger Dead		
49	C#2	C#4	Crash Cymbal 1									Hollo Slap		
50	D2	D4	High Tom									Hollo Dum		
51	D#2	D#4	Ride Cymbal 1									Kasik		1
52	E2	E4	Crash Cymbal 2									Kasik Flam		1
53	F2	F4	Duhulla Dom			Paila L			Paila L			Bass Darbuka Tek Dead		
54	F#2	F#4	Tambourine			Timbale H			Timbale H			Bass Darbuka Tek Flam		
55	G2	G4	Duhulla Tak									Bass Darbuka Teke		
56	G#2	G#4	Cowbell									Bass Darbuka Teke Other Finger		
57	A2	A4	Duhulla Sak									Bass Darbuka Teke Index Finger		
58	A#2	A#4	Claves									Bass Darbuka Tek		
59	B2	B4	Doff Dom			Paila H			Paila H			Bass Darbuka Slap		
60	C3	C5	Kattem Dom			Cowbell Top			Cowbell Top			Bass Darbuka Slap Medium		7
61	C#3	C#5	Kattem Tak						Cowbell 1			Bass Darbuka Dum		7
62	D3	D5	Kattem Sak						Cowbell 2			Darbuka Roll Close	●	6
63	D#3	D#5	Kattem Tak						Cowbell 3			Darbuka Roll Open	●	6
64	E3	E5	Doff Tak			Guiro Short			Guiro Short			Darbuka Teke Damped Flam		
65	F3	F5	Tabla Dom			Guiro Long	●		Guiro Long	●		Darbuka Tek Dead		
66	F#3	F#5	Tabla Tak 1						Metal Guiro Short			Darbuka Tek Damped		
67	G3	G5	Tabla Tik						Metal Guiro Long	●		Darbuka Teke Open Flam		
68	G#3	G#5	Tabla Tak 2			Tambourine			Tambourine			Darbuka Teke Open		
69	A3	A5	Tabla Sak						Tambourim Open			Darbuka Teke Other Finger 1		
70	A#3	A#5	Tabla Roll Edge	●					Tambourim Mute			Darbuka Teke Index Finger 1		
71	B3	B5	Tabla Flam						Tambourim Tip			Darbuka Tek 1		
72	C4	C6	Sagat 1			Maracas			Maracas			Darbuka Teke Other Finger 2		
73	C#4	C#6	Tabel Dom			Shaker			Shaker			Darbuka Teke Index Finger 2		
74	D4	D6	Sagat 3			Cabasa			Cabasa			Darbuka Tek 2		
75	D#4	D#6	Tabel Tak						Cuica Mute			Darbuka Slap Medium		
76	E4	E6	Sagat 2						Cuica Open			Darbuka Slap		8
77	F4	F6	Rik Dom						Cowbell High 1			Darbuka Dum		8
78	F#4	F#6	Rik Tak 2						Cowbell High 2			Bongo Tek Roll	●	
79	G4	G6	Rik Finger 1						Shekere			Bongo Flam		
80	G#4	G#6	Rik Tak 1						Shekere Tone			Bongo Tek Flam		
81	A4	A6	Rik Finger 2						Triangle Mute		1	Bongo Tek		
82	A#4	A#6	Rik Brass Tremolo	●					Triangle Open		1	Bongo Slap		
83	B4	B6	Rik Sak									Bongo Flam Hi		
84	C5	C7	Rik Tik						Wind Chime			Bongo Dum		
85	C#5	C#7												
86	D5	D7												
87	D#5	D#7												
88	E5	E7												
89	F5	F7												
90	F#5	F#7												
91	G5	G7												

Same as Standard Kit 1

\*1 Key Off: Keys marked "●" stop sounding the instant they are released.

\*2 Alternate Group: Playing any instrument within a numbered group will immediately stop the sound of any other instrument in the same group of the same number.

No Sound

# Style List / Liste der Styles / Liste des styles / Lista de estilos / Lista de estilos

Category	Style Name	
Pop&Rock	ContempGtrPop	
	80sPowerRock	
	80sAmericanPop	
	90sRockBallad	
	WestCoastBeat	
	Cool8Beat	
	Live8Beat	
	60sPianoPop	
	60sGuitarPop	
	60sPopRock	
	BritRockPop	
	StandardRock	
	FunkPopRock	
	AcousticRock	
	BritPopSwing	
	VintageGtrPop	
	60sVintageRock	
	60s8Beat	
	70s8Beat	
	BubblegumPop	
	8BeatModern	
	WestCoastPop	
	SoftRock	
	JazzPop	
	KoolShuffle	
	90sGuitarPop	
	ChartGuitarPop	
	J-PopHit	
	Ballad	Easy8Beat1
		Easy8Beat2
		60sBig-Hit
		70sPianoHit
		70sGlamPiano
ModernPopBld		
R&BSoulBallad		
SmoothBallad		
90sPianoBallad		
90sCoolBallad		
StandardPnoBld		
ClassicPianoBld		
PopGuitarBallad		
8BeatBallad1		
8BeatBallad2		
PopBallad		
EPBallad		
80sEPBallad		
80sBoyBand		
PowerBallad		
AcousticGtrBld		
EasyAcousticBld		
Modern16BtBld		
MOR16Beat		
16BeatBallad		
6-8BalladRock		
6-8SlowRock		
6-8Orchestral		
6-8Modern		
12-8Ballad		
70sPopDuo		
EasyBallad		
OrganBallad		
NewR&BBallad		
PianoBallad		
LoveSong		
PopWaltz		
GuitarSerenade		
Chillout		
Dance		Electronica
	GlobalDJ's	
	Ibiza2010	
	EuroTrance	
	DreamDance	
	70sDisco1	
	70sDisco2	

Category	Style Name	
Dance	DiscoPhilly	
	80sDisco	
	DiscoHouse	
	ClubHouse	
	RetroPop	
	EuroHipHop	
	ClassicHipHop	
	NewR&B	
	ChartPop	
	6-8Trance	
	Swing&Jazz	CoolJazzClub
		SlowJazzBallad
		SwingMedium
		FastJazz
		AcousticJazz
		ModernBigBand
		ModBigBandShfl
		ClassicBigBand
		EasySwing
		SaloonPiano
OrchBigBand1		
OrchBigBand2		
OrchSwing1		
OrchSwing2		
MORSwing		
JazzGuitarClub		
InstrumentalJazz		
JazzClub		
CoolJazzBallad		
ModernJazzBld		
CoolJazzWaltz		
JazzWaltzFast		
JazzWaltzMed		
JazzWaltzSlow		
EasyWaltz		
BigBandFast1		
BigBandFast2		
OrganGroove		
FrenchJazz		
JumpJive		
StandardSwing		
MovieSwing		
MidnightSwing		
Bebop		
Five-Four		
Dixieland1		
Dixieland2		
Ragtime		
Charleston		
40sBigBand		
R&B	FunkyShuffle	
	70sCoolShuffle	
	6-8SoulBallad	
	FranklySoul	
	KoolFunk	
	VintageR&R	
	TheBlues	
	SlowBlues	
	Skiffle	
	BluesRock	
	Rock&Roll1	
	Rock&Roll2	
	60sRock&Roll	
	OldiesR&R	
	Twist	
	WorshipSlow	
	WorshipMedium	
	GospelSisters	
	GospelSwing	
	6-8Soul	
DetroitPop1		
DetroitPop2		
MotorCity		
LovelyShuffle		

Category	Style Name
R&B	Soul
	PianoBoogie
Country	EasyCountryPop
	70sCountrySwing
	SlowCountryPop
	70sChartCnry
	70sCountryPop
	Bluegrass
	ModBluegrass
	Hoedown
	EasyCountry
	NewCountry
	CountryPopBld
	CountryPop
	Country2-4
CountryShuffle	
CountryHits	
CountryWaltz	
CnrySing-along	
ModCountryBld	
FolkPop	
Latin	BrazilianBossa
	CoolBossa
	BossaSlow
	BossaFast
	SambaFast
	Cumbia
	Bomba
	Bachata
	Guajira
	Danzon
	BrazilianSamba
	BossaNova
	OrchestralBossa
	BoleroLento
	RumbaBolero
	Merengue
	Salsa
	CubanSon
	Beguine
	HappyReggae
	RockChaCha
	PopBossa
	LatinDisco
RumbaIsland	
GuitarRumba	
Ballroom	VienneseWaltz
	EnglishWaltz
	Slowfox
	Foxtrot
	Quickstep
	Tango
	Pasodoble
	Samba
	Rumba
	ChaChaCha
	Jive
	Swingfox
	StandardWaltz
StandardRumba	
OrganQuickstep	
OrganSamba	
OrganSwing	
9-8Waltz	
Entertainment	Sci-fiMarch
	TapDanceSwing
	BroadwayBallad
	CartoonBallad
	WildWest
	SecretService
	70sTVTheme
	SaturdayNight
MovieDisco	
MovieBallad	

Category	Style Name
Entertainment	OrchestralMarch
	OrchestraBolero
	Moonlight6-8
	BaroqueAir
	ModBroadwyBld
	70sFrenchHit
	PubPiano
	ChristmasSwing
	ChristmasWaltz
	Showtune
	DiscoFoxRock
	MallorcaParty
	SchlagerFox
	SchlagerSamba
	SchlagerShuffle
	SchlagerPolka
	Schlager6-8
	SchlagerRumba
	SchlagerBeat
	AlpBallad
	SchlagerPop
	PartyPolka
	PolkaPop
	Tijuana
	ChildrensMarch
	ScandSlowRock
	ScandCountry
ScandShuffle	
World	Flamenco
	PopFlamenco
	SpanishPaso
	FrenchMusette
	Sirtaki
	IrishDance
	IrishHymn
	GermanWaltz
	Norteno
	OrientalPop
	ItalianWaltz
	FrenchWaltz
	ScandWaltz
	TraditionalWaltz
	OberWalzer
	OberPolka
	Tarantella
	Hawaiian
	Jig
	Reel
USMarch	
GermanMarch	
6-8March	
TurkishEuro	
PIANIST	Stride1
	Stride2
	PianoSwing1
	PianoSwing2
	PianoRag1
	PianoRag2
	PianoBlues1
	PianoBlues2
	PianoR&R
	BoogieWoogie
	Arpeggio1
	Arpeggio2
	Arpeggio3
	PianoOrchBallad
	Musical
	Traditional1
	Traditional2
	Traditional3
	SlowRock
	2BeatSwing
JazzBallad	
8Beat	

Category	Style Name
PIANIST	8BeatPianoBld
	4Stroke
	Nocturne
	PianoMarch1
	PianoMarch2
	6-8PianoMarch
	Waltz
	JazzWaltz
	PianoBossa
	PianoSamba
	PianoChaCha
	PianoBeguine
	PianoRumba
	PianoSlowWaltz

# Direct Access Chart / Tabelle Direktzugriff / Feuille d'accès direct / Gráfico de acceso directo / Gráfico de acesso direto


Operation: [DIRECT ACCESS] button + button listed below		Function of the accessed LCD display			
STYLE CONTROL	[ACMP ON/OFF]	FUNCTION	STYLE SETTING	SPLIT POINT/CHORD FINGERING	CHORD FINGERING
	[AUTO FILL IN]			-	-
	[OTS LINK]				
	[BREAK]				
	INTRO [I]				
	INTRO [II]				
	INTRO [III]				
	MAIN VARIATION [A]				
	MAIN VARIATION [B]				
	MAIN VARIATION [C]				
	MAIN VARIATION [D]				
	ENDING/rit. [I]				
	ENDING/rit. [II]				
	ENDING/rit. [III]				
	[SYNC START]				
[SYNC STOP]	STYLE SETTING	-			
[START/STOP]					
STYLE Category Selection	[POP & ROCK]	FUNCTION	STYLE SETTING	-	-
	[BALLAD]				
	[DANCE]				
	[SWING & JAZZ]				
	[R & B]				
	[COUNTRY]				
	[LATIN]				
	[BALLROOM]				
	[ENTERTAINMENT]				
	[WORLD]				
[PIANIST]					
SONG CONTROL	[SONG SELECT]	FUNCTION	SONG SETTING	OTHERS	-
	[TRACK 1 (R)]			GUIDE/CHANNEL	
	[TRACK 2 (L)]				
	[EXTRA TRACKS]				
	[FF]				
	[REW]				
	[PLAY/PAUSE]			OTHERS	
	[STOP]				
	[REC]			GUIDE CHANNEL	
	[SCORE]				
	[LYRICS]			OTHERS	
	[GUIDE]			GUIDE/CHANNEL	
	[REPEAT]			OTHERS	
TEMPO	[TAP TEMPO]	FUNCTION	UTILITY	CONFIG 1	TAP
	[ + ]		STYLE SETTING	-	-
	[ - ]				
METRONOME	[ON/OFF]	FUNCTION	UTILITY	CONFIG 1	METRONOME
TRANSPOSE	[ + ]	FUNCTION	CONTROLLER	KEYBOARD/PANEL	TRANSPOSE ASSIGN
	[ - ]				
[DEMO]	FUNCTION	SYSTEM	OWNER	-	
[FUNCTION]	FUNCTION	MIDI	PRESET	-	
[MIXING CONSOLE]	MIXING CONSOLE(PANEL PART)	VOL/VOICE	-	-	
[CHANNEL ON/OFF]					
[USB]	FUNCTION	UTILITY	USB	-	
[AUDIO]	AUDIO OPEN SAVE	-	-	-	
[DIRECT ACCESS]	-	-	-	-	
TAB	[▶]	-	-	-	-
	[◀]	-	-	-	-
[ENTER]	-	-	-	-	
[EXIT]	MAIN	-	-	-	
[DATA ENTRY]	-	-	-	-	

Operation: [DIRECT ACCESS] button + button listed below		Function of the accessed LCD display			
VOICE CONTROL	PART ON/OFF [RIGHT 1]	FUNCTION	VOICE SETTING	VOICE SET FILTER	RIGHT 1
	PART ON/OFF [RIGHT 2]				RIGHT 2
	PART ON/OFF [LEFT]				LEFT
	[VOICE EFFECT]	VOICE EFFECT	KEYBOARD HARMONY	-	-
VOICE Category Selection	[PIANO]	FUNCTION	VOICE SETTING	VOICE SET FILTER	-
	[E. PIANO]				
	[ORGAN]				
	[GUITAR]				
	[BASS]				
	[ACCORDION]				
	[STRINGS]				
	[BRASS]				
	[WOODWIND]				
	[CHOIR & PAD]				
	[SYNTH]				
	[PERCUSSION]				
	[DRUM KIT]				
[ORGAN FLUTES]					
[MUSIC FINDER]	MUSIC FINDER	MUSIC FINDER SEARCH 1	-	-	
ONE TOUCH SETTING	[1]	OTS INFORMATION	-	-	-
	[2]				
	[3]				
	[4]				
[PIANO ROOM]	FUNCTION	CONTROLLER	KEYBOARD/PANEL	TOUCH RESPONSE	
REGISTRATION MEMORY	REGIST BANK [ + ]	FUNCTION	REGIST SEQUENCE/FREEZE	REGISTRATION SEQUENCE	-
	REGIST BANK [ - ]				
	[MEMORY]				
	[1]	REGIST INFOTMATION	-	-	-
	[2]				
	[3]				
	[4]				
	[5]				
	[6]				
[7]					
[8]					
PEDAL	Damper Pedal (Right)	FUNCTION	CONTROLLER	PEDAL	RIGHT
	Sostenuto Pedal (Center)				CENTER
	Left Pedal				LEFT
	AUX PEDAL				AUX

\* The cursor position differs depending on the current keyboard part.



# Chord Types Recognized in the Fingered Mode / Im Fingered-Modus erkannte Akkordarten / Types d'accords reconnus en mode Fingered / Tipos de acordes reconocidos en el modo Fingered (digitado) / Tipos de acorde reconhecidos no modo dedilhado

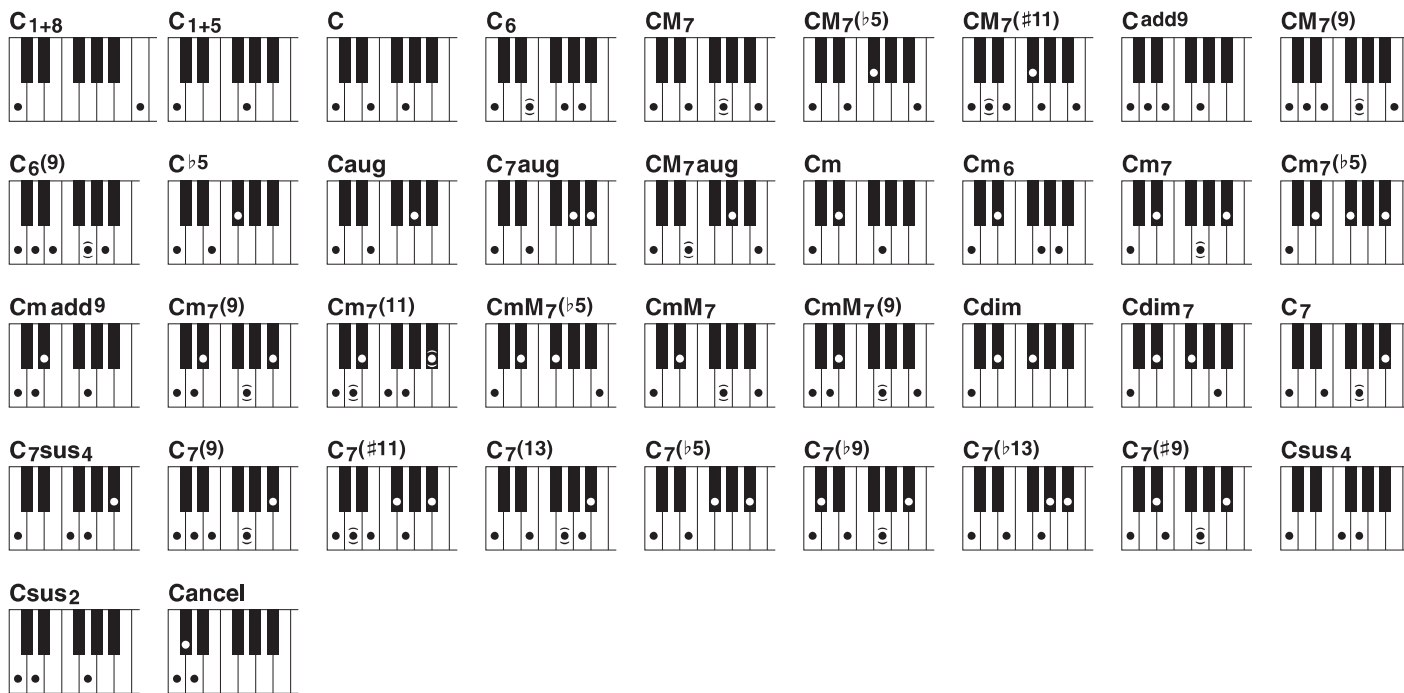

Chord Name [Abbreviation]	Normal Voicing	Display for root "C"
1+8	1+8	C1+8
1+5	1+5	C1+5
Major [M]	1+3+5	C
Sixth [6]	1+(3)+5+6	C6
Major seventh [M7]	1+3+(5)+7	CM7
Major seventh flatted fifth [M7 b 5]	1+3+ b 5+7	CM7( b 5)
Major seventh add sharp eleventh [M7( # 11)]	1+(2)+3+ # 4+5+7	CM7( # 11)
Add ninth [(9)]	1+2+3+5	Cadd9
Major seventh ninth [M7_9]	1+2+3+(5)+7	CM7(9)
Sixth ninth [6_9]	1+2+3+(5)+6	C6(9)
Flatted fifth [( b 5)]	1+3+ b 5	C b 5
Augmented [aug]	1+3+ # 5	Caug
Seventh augmented [7aug]	1+3+ # 5+ b 7	C7aug
Major seventh augmented [M7aug]	1+(3)+ # 5+7	CM7aug
Minor [m]	1+ b 3+5	Cm
Minor sixth [m6]	1+ b 3+5+6	Cm6
Minor seventh [m7]	1+ b 3+(5)+ b 7	Cm7
Minor seventh flatted fifth [m7 b 5]	1+ b 3+ b 5+ b 7	Cm7( b 5)
Minor add ninth [m(9)]	1+2+ b 3+5	Cm add9
Minor seventh ninth [m7(9)]	1+2+ b 3+(5)+ b 7	Cm7(9)
Minor seventh eleventh [m7(11)]	1+(2)+ b 3+4+5+( b 7)	Cm7(11)
Minor major seventh flatted fifth [mM7 b 5]	1+ b 3+ b 5+7	CmM7( b 5)
Minor major seventh [mM7]	1+ b 3+(5)+7	CmM7
Minor major seventh ninth [mM7(9)]	1+2+ b 3+(5)+7	CmM7(9)
Diminished [dim]	1+ b 3+ b 5	Cdim
Diminished seventh [dim7]	1+ b 3+ b 5+6	Cdim7
Seventh [7]	1+3+(5)+ b 7	C7
Seventh suspended fourth [7sus4]	1+4+5+ b 7	C7sus4
Seventh ninth [7(9)]	1+2+3+(5)+ b 7	C7(9)
Seventh add sharp eleventh [7( # 11)]	1+(2)+3+ # 4+5+ b 7	C7( # 11)
Seventh add thirteenth [7(13)]	1+3+(5)+6+ b 7	C7(13)
Seventh flatted fifth [7 b 5]	1+3+ b 5+ b 7	C7( b 5)
Seventh flatted ninth [7( b 9)]	1+ b 2+3+(5)+ b 7	C7( b 9)
Seventh add flatted thirteenth [7( b 13)]	1+3+5+ b 6+ b 7	C7( b 13)
Seventh sharp ninth [7( # 9)]	1+ # 2+3+(5)+ b 7	C7( # 9)
Suspended fourth [sus4]	1+4+5	Csus4
One plus two plus five [sus2]	1+2+5	Csus2
cancel	1+ b 2+2	Cancel

\* Notes in parentheses can be omitted.

# Effect Type List / Liste der Effekttypen / Liste des types d'effet / Lista de tipos de efecto / Lista de tipos de efeito

## Reverb Block

Category	Type Name	Description	MSB	LSB	
Reverb	Real Large Hall	Real reverb simulating the acoustics of a large sized hall.	1	32	
	Real Medium Hall	Real reverb simulating the acoustics of a medium sized hall.	1	33	
	Real Bright Hall	Real reverb simulating the acoustics of a bright sounding hall.	1	34	
	Basic Hall	Reverb simulating the acoustics of a hall. Standard setting.	1	21	
	Light Hall	Reverb simulating the acoustics of a hall. Light setting.	1	22	
	Ballad Hall	Reverb simulating the acoustics of a hall. For ballad type music.	1	19	
	Piano Hall	Reverb simulating the acoustics of a hall. For piano sound.	1	20	
	Hall 1	Reverb simulating the acoustics of a hall.	1	0	
	Hall 2		1	16	
	Hall 3		1	17	
	Hall 4		1	18	
	Hall 5		1	1	
	Vocal Hall 1	Reverb suitable for vocals.	1	27	
	Vocal Hall 2		1	28	
	Piano Recital Hall	Reverb simulating the acoustics of a medium sized recital hall. For piano sound.	1	24	
	Piano Concert Hall	Reverb simulating the acoustics of a large sized hall. For piano sound.	1	4	
	Piano Cathedral	Reverb simulating the acoustics of a cathedral. For piano sound.	1	5	
	Real Room	Real reverb simulating the acoustics of a room.	2	32	
	Real Power Room	Real reverb simulating the acoustics of a room with powerful room reflections.	2	33	
	Acoustic Room	Reverb simulating the acoustics of a room. Standard setting.	2	20	
	Drums Room	Reverb simulating the acoustics of a room. For drum sounds.	2	21	
	Piano Chamber	Reverb simulating the acoustics of a chamber. For piano sound.	2	24	
	Stage	Reverb suitable for a solo instrument.	3	16	
	Piano Club	Reverb simulating the acoustics of a club. For piano sound.	3	24	
	Real Large Plate	Real reverb simulating a large plate reverb unit.	4	32	
	Real Medium Plate	Real reverb simulating a medium sized plate reverb unit.	4	33	
	Real Rattle Plate	Real reverb simulating a plate reverb unit with spring rattle.	4	34	
	Plate	Reverb simulating a plate reverb unit.	4	16	
	Piano Plate	Reverb simulating a plate reverb unit. For piano sound.	4	24	
	Legacy	Hall M	Reverb simulating the acoustics of a hall.	1	6
		Hall L		1	7
		Atmosphere Hall	A unique long reverb with atmosphere.	1	23
Large Hall		Reverb simulating the acoustics of a hall.	1	2	
Medium Hall			1	3	
Percussion Room		Reverb simulating the acoustics of a room. For percussion sounds.	2	22	
Room 1		Reverb simulating the acoustics of a room.	2	16	
Room 2			2	17	
Room 3			2	18	
Room 4			2	19	
Room 5			2	0	
Room 6			2	1	
Room 7			2	2	
Room S			2	5	
Room M			2	6	
Room L			2	7	
Warm Room		Reverb simulating the acoustics of a warm room.	2	3	
White Room		A unique short reverb with a bit of initial delay.	16	0	
Woody Room		Reverb simulating the acoustics of a wood-built room.	2	4	
Stage 2		Reverb suitable for a solo instrument.	3	17	
Stage 3			3	0	
Stage 4		Reverb suitable for a solo instrument.	3	1	
Plate 2		Reverb simulating a plate reverb unit.	4	17	
Plate 3			4	0	
GM Plate			4	7	
Rich Plate		Reverb simulating a rich plate reverb unit.	4	1	
Tunnel		Simulates a cylindrical space expanding to left and right.	17	0	
Canyon		A hypothetical acoustic space which extends without limit.	18	0	
Basement		A bit of initial delay followed by reverb with a unique resonance.	19	0	
---		No Effect	No effect.	0	0

## Chorus Block

Category	Type Name	Description	MSB	LSB	
Reverb	Hall 1	Reverb simulating the acoustics of a hall.	1	0	
	Hall 2		1	16	
	Hall 3		1	17	
	Hall 4		1	18	
	Hall 5		1	1	
	Acoustic Room	Reverb simulating the acoustics of a room. Standard setting.	2	20	
	Drums Room	Reverb simulating the acoustics of a room. For drum sounds.	2	21	
	Stage	Reverb suitable for a solo instrument.	3	16	
Delay	Plate	Reverb simulating a plate reverb unit.	4	16	
	Tempo Delay 1	Tempo-synchronized delay.	21	0	
	Tempo Delay 2		21	16	
	Tempo Echo	Tempo-synchronized echo.	21	8	
	Tempo Cross 1	Tempo-synchronized cross delay.	22	0	
	Tempo Cross 2		22	16	
	Tempo Cross 3		22	17	
Tempo Cross 4	22		18		
Modulation	Chorus 1	Conventional chorus program with rich, warm chorusing.	66	17	
	Chorus 2		66	8	
	Symphonic	Adds more stages to the modulation of Celeste.	68	16	
	Flanger	Creates a sound similar to that of a jet airplane.	67	8	
	Tempo Flanger	Tempo-synchronized flanger.	107	0	
	Phaser	Cyclically modulates the phase to add modulation to the sound.	72	0	
	Tempo Phaser	Tempo-synchronized phaser.	108	0	
	E-Piano Phaser	Cyclically modulates the phase to add modulation to the sound. For electric piano.	72	17	
	Dual Rotary Speaker Bright	Simulates a rotary speaker.	99	16	
	Dual Rotary Speaker Warm		99	17	
	Rotary Speaker		69	16	
	Tremolo	Rich Tremolo effect with both volume and pitch modulation.	70	16	
	E-Piano Tremolo		70	18	
	Tempo Tremolo	Tempo-synchronized rich Tremolo effect with both volume and pitch modulation.	120	0	
	Auto Pan	Several panning effects that automatically shift the sound position (left, right, front, back).	71	16	
Tempo Auto Pan	Tempo-synchronized auto pan.	121	0		
Legacy	Hall M	Reverb simulating the acoustics of a hall.	1	6	
	Hall L		1	7	
	Atmosphere Hall	A unique long reverb with atmosphere.	1	23	
	Percussion Room	Reverb simulating the acoustics of a room. For percussion sounds.	2	22	
	Room 1	Reverb simulating the acoustics of a room.	2	16	
	Room 2		2	17	
	Room 3		2	18	
	Room 4		2	19	
	Room 5		2	0	
	Room 6		2	1	
	Room 7		2	2	
	Room S		2	5	
	Room M		2	6	
	Room L		2	7	
	Stage 2	Reverb suitable for a solo instrument.	3	17	
	Stage 3		3	0	
	Stage 4		3	1	
	Plate 2	Reverb simulating a plate reverb unit.	4	17	
	Plate 3		4	0	
	GM Plate		4	7	
	Karaoke 1	Echo for karaoke.	20	0	
	Karaoke 2		20	1	
	Karaoke 3		20	2	
	Early Reflection 1	This effect isolates only the early reflection components of the reverb.	9	0	
	Early Reflection 2		9	1	
	Chorus 3	Conventional chorus program with rich, warm chorusing.	66	16	
	Chorus 4		66	1	
	Chorus 5		65	2	
	Chorus 6		65	0	
	Chorus 7		65	1	
	Chorus 8		65	8	
	Chorus Fast		65	16	
	Chorus Lite		65	17	
	GM Chorus 1		65	3	
	GM Chorus 2		65	4	
	GM Chorus 3		65	5	
	GM Chorus 4		65	6	
	Feedback Chorus		65	7	
	Celeste 1		A 3-phase LFO adds modulation and spaciousness to the sound.	66	0
	Celeste 2			66	2
	Symphonic 2	Adds more stages to the modulation of Celeste.	68	0	
	Ensemble Detune 1	Chorus effect without modulation, created by adding a slightly pitch-shifted sound.	87	0	
	Ensemble Detune 2		87	16	
	Flanger 2	Creates a sound similar to that of a jet airplane.	67	16	

**Chorus Block**

Category	Type Name	Description	MSB	LSB
Legacy	Flanger 3	Creates a sound similar to that of a jet airplane.	67	17
	Flanger 4		67	1
	Flanger 5		67	0
	GM Flanger		67	7
	Phaser 2	Cyclically modulates the phase to add modulation to the sound.	72	8
	Phaser 3		72	19
	Tempo Phaser 2	Tempo-synchronized phaser.	108	16
	E-Piano Phaser 2	Cyclically modulates the phase to add modulation to the sound. For electric piano.	72	18
	E-Piano Phaser 3		72	16
	Dual Rotary Speaker 1	Simulates a rotary speaker.	99	0
	Dual Rotary Speaker 2		99	1
	Rotary Speaker 2		71	17
	Rotary Speaker 3		71	18
	Rotary Speaker 4		70	17
	Rotary Speaker 5		66	18
	Rotary Speaker 6		69	0
	Rotary Speaker 7		71	22
	2way Rotary Speaker		86	0
	Tremolo 2	Rich Tremolo effect with both volume and pitch modulation.	71	19
	Tremolo 3		70	0
	Guitar Tremolo 1		71	20
	Guitar Tremolo 2		70	19
	Vibraphone Rotor	Vibraphone effect.	119	0
	Auto Pan 2	Several panning effects that automatically shift the sound position (left, right, front, back).	71	0
	Auto Pan 3		71	1
	E-Piano Auto Pan		71	21
	Tempo Auto Pan 2	Tempo-synchronized auto pan.	121	1
	Pitch Change 1	Changes the pitch of the input signal.	80	16
	Pitch Change 2		80	0
	Pitch Change 3		80	1
---	No Effect	No effect.	0	0

## DSP Block

Panel Block Name	XG Block Name
DSP1	XG Variation Block
DSP2	XG Insertion1 Block
DSP3	XG Insertion2 Block
DSP4	XG Insertion3 Block

Category	Type Name	Description	MSB	LSB	
Reverb	Hall 1	Reverb simulating the acoustics of a hall.	1	0	
	Hall 2		1	16	
	Hall 3		1	17	
	Hall 4		1	18	
	Hall 5		1	1	
	Acoustic Room	Reverb simulating the acoustics of a room. Standard setting.	2	20	
	Drums Room	Reverb simulating the acoustics of a room. For drum sounds.	2	21	
	Stage	Reverb suitable for a solo instrument.	3	16	
	Plate	Reverb simulating a plate reverb unit.	4	16	
Delay	Delay LCR 1	Produces three delayed sounds: L, R and C (center).	5	16	
	Delay LCR 2		5	0	
	Delay LR	Produces two delayed sounds: L and R. Two feedback delays are provided.	6	0	
	Echo	Two delayed sounds (L and R), and independent feedback delays for L and R.	7	0	
	Cross Delay 1	The feedback of the two delayed sounds is crossed.	8	0	
	Cross Delay 2		8	16	
	Tempo Delay 1	Tempo-synchronized delay.	21	0	
	Tempo Delay 2		21	16	
	Tempo Echo	Tempo-synchronized echo.	21	8	
	Tempo Cross 1	Tempo-synchronized cross delay.	22	0	
	Tempo Cross 2		22	16	
	Tempo Cross 3		22	17	
	Tempo Cross 4		22	18	
Distortion	Multi FX Distortion Solo	Multi effector for guitar. Setting for guitar solo.	95	32	
	Multi FX Distortion Basic	Multi effector for guitar. Setting for basic distortion.	95	33	
	Multi FX Overdrive Chorus	Multi effector for guitar. Setting for overdrive & chorus.	95	34	
	Multi FX Crunch Wah	Multi effector for guitar. Setting for crunch & wah.	95	35	
	Multi FX Oldies Delay	Multi effector for guitar. Setting for vintage delay.	95	36	
	Multi FX Vintage Echo	Multi effector for guitar. Setting for vintage echo.	95	37	
	Small Stereo Distortion	Stereo distortion for guitar. Setting for distortion sound.	96	32	
	Small Stereo Overdrive	Stereo distortion for guitar. Setting for overdrive sound.	96	33	
	Small Stereo Vintage Amp	Stereo distortion for guitar. Setting for vintage sound.	96	34	
	Small Stereo Heavy Dist	Stereo distortion for guitar. Setting for heavy sound.	96	35	
	British Combo Classic	British combo amp simulator. Setting for classic sound.	97	32	
	British Combo Top Boost	British combo amp simulator. Setting for "TOP BOOST" sound.	97	33	
	British Combo Custom	British combo amp simulator. Setting for custom sound.	97	34	
	British Combo Heavy	British combo amp simulator. Setting for heavy sound.	97	35	
	British Legend Blues	British stack amp simulator. Setting for blues sound.	98	32	
	British Legend Heavy1	British stack amp simulator. Setting for heavy sound 1.	98	33	
	British Legend Heavy2	British stack amp simulator. Setting for heavy sound 2.	98	34	
	British Legend Clean	British stack amp simulator. Setting for clean sound.	98	35	
	British Legend Dirty Clean	British stack amp simulator. Setting for crunch sound.	98	36	
	V Distortion Crunch	Distortion which simulates the sound of a vintage tube, fuzz effect, etc.	98	18	
	V Distortion Blues		98	21	
	Stereo Amp Sim Solid	Stereo amp simulator.	75	29	
	Stereo Amp Sim Crunch		75	30	
	Stereo Amp Sim Blues		75	28	
	V Distortion Hard + Delay	V Distortion Hard and Delay are connected in series.	98	1	
	EQ & Comp	Compressor Medium	Compressor with medium setting.	83	16
		Compressor Heavy	Compressor with heavy setting.	83	17
Compressor Melody		Compressor for the Melody part.	105	16	
Compressor Bass		Compressor for the Bass part.	105	17	
EQ Telephone		Equalizer effect that cuts both high and low frequencies, to simulate the sound heard through a telephone receiver.	76	17	
3Band EQ		A mono EQ with adjustable LOW, MID, and HIGH equalization.	76	0	
Loop FX 1		Degrades the audio quality of the input signal.	94	16	
Loop FX 2			94	17	
Lo-Fi Drum 1		Degrades the audio quality of the input signal. Ideal for drum sounds.	94	18	
Lo-Fi Drum 2			94	19	
Lo-Fi Drum 3			76	19	
Lo-Fi Drum 4			76	20	
Modulation		Chorus 1	Conventional chorus program with rich, warm chorusing.	66	17
	Chorus 2	66		8	
	Symphonic	Adds more stages to the modulation of Celeste.	68	16	
	Flanger	Creates a sound similar to that of a jet airplane.	67	8	
	V Flanger	A simulation of an analog flanger effect. The LFO has a random setting.	104	0	
	Tempo Flanger	Tempo-synchronized flanger.	107	0	
	Phaser	Cyclically modulates the phase to add modulation to the sound.	72	0	
	Tempo Phaser	Tempo-synchronized phaser.	108	0	
	E-Piano Phaser	Cyclically modulates the phase to add modulation to the sound. For electric piano.	72	17	
	Auto Wah	Cyclically modulates the center frequency of a wah filter.	78	16	
	Auto Wah + Distortion	Distortion can be applied to the output of Auto Wah.	78	17	

## DSP Block

Category	Type Name	Description	MSB	LSB	
Modulation	Tempo Auto Wah	Tempo-synchronized Auto Wah.	79	0	
	Touch Wah	Changes the center frequency of a wah filter according to the input level.	82	0	
	Touch Wah + Distortion	Distortion can be applied to the output of Touch Wah.	82	16	
	Pedal Wah	Changes the center frequency of a wah filter according to "Pedal Control" parameter. (See Effect Parameter List.)	122	0	
	Pedal Wah + Distortion	Distortion can be applied to the output of Pedal Wah.	122	1	
	Dual Rotary Speaker Bright	Simulates a rotary speaker.	99	16	
	Dual Rotary Speaker Warm		99	17	
	Rotary Speaker		69	16	
	Tremolo	Rich Tremolo effect with both volume and pitch modulation.	70	16	
	E-Piano Tremolo		70	18	
	Tempo Tremolo		120	0	
	Auto Pan	Several panning effects that automatically shift the sound position (left, right, front, back).	71	16	
	Tempo Auto Pan	Tempo-synchronized auto pan.	121	0	
Legacy	Hall M	Reverb simulating the acoustics of a hall.	1	6	
	Hall L		1	7	
	Atmosphere Hall	A unique long reverb with atmosphere.	1	23	
	Percussion Room	Reverb simulating the acoustics of a room. For percussion sounds.	2	22	
	Room 1	Reverb simulating the acoustics of a room.	2	16	
	Room 2		2	17	
	Room 3		2	18	
	Room 4		2	19	
	Room 5		2	0	
	Room 6		2	1	
	Room 7		2	2	
	Room S		2	5	
	Room M		2	6	
	Room L		2	7	
	White Room	A unique short reverb with a bit of initial delay.	16	0	
	Stage 2	Reverb suitable for a solo instrument.	3	17	
	Stage 3		3	0	
	Stage 4		3	1	
	Plate 2	Reverb simulating a plate reverb unit.	4	17	
	Plate 3		4	0	
	GM Plate		4	7	
	Tunnel	Simulates a cylindrical space expanding to left and right.	17	0	
	Canyon	A hypothetical acoustic space which extends without limit.	18	0	
	Basement	A bit of initial delay followed by reverb with a unique resonance.	19	0	
	Karaoke 1	Echo for karaoke.	20	0	
	Karaoke 2		20	1	
	Karaoke 3		20	2	
	Early Reflection 1	This effect isolates only the early reflection components of the reverb.	9	0	
	Early Reflection 2		9	1	
	Gate Reverb 1	Simulation of gated reverb.	10	0	
	Gate Reverb 2		10	16	
	Reverse Gate	Simulation of gated reverb played back in reverse.	11	0	
	V Distortion Warm	Distortion which simulates the sound of a vintage tube, fuzz effect, etc.	98	22	
	V Distortion Classic Hard		98	23	
	V Distortion Classic Soft		98	20	
	V Distortion Metal		98	24	
	V Distortion Edgy		98	19	
	V Distortion Solid		98	25	
	V Distortion Clean 1		98	17	
	V Distortion Clean 2		98	26	
	V Distortion Twin		98	16	
	V Distortion Rockabilly		103	18	
	V Distortion Jazz Clean		98	27	
	V Distortion Fusion		103	19	
	V Distortion Hard		98	0	
	V Distortion Soft		98	2	
	Stereo Amp Sim Clean		Stereo amp simulator.	75	27
	Stereo Amp Sim BluesHarp			75	31
	Distortion Hard 1		Hard-edge distortion.	75	16
	Distortion Hard 2	75		22	
	Distortion Soft 1	Soft, warm distortion.	75	17	
	Distortion Soft 2		75	23	
	Distortion Heavy	Heavy distortion.	73	0	
	Overdrive	Adds mild distortion to the sound.	74	0	
Stereo Distortion	Stereo distortion.	73	8		
Stereo Overdrive	Stereo overdrive.	74	8		
Stereo Distortion Hard	Hard-edge stereo distortion.	75	18		
Stereo Distortion Soft	Soft, warm soft distortion.	75	19		
Amp Simulator 1	A simulation of a guitar amp.	75	0		
Amp Simulator 2		75	1		
Stereo Amp Simulator 1	Stereo amp simulator.	75	20		
Stereo Amp Simulator 2		75	21		
Stereo Amp Simulator 3		75	8		
Stereo Amp Simulator 4		75	24		

## DSP Block

Category	Type Name	Description	MSB	LSB	
Legacy	Stereo Amp Simulator 5	Stereo amp simulator.	75	25	
	Stereo Amp Simulator 6		75	26	
	Distortion + Delay 1	Distortion and Delay are connected in series.	95	16	
	Distortion + Delay 2		95	0	
	Overdrive + Delay 1	Overdrive and Delay are connected in series.	95	17	
	Overdrive + Delay 2		95	1	
	Comp + Dist + Delay 1	Compressor, Distortion and Delay are connected in series.	96	16	
	Comp + Dist + Delay 2		96	0	
	Comp + OD + Delay 1	Compressor, Overdrive and Delay are connected in series.	96	17	
	Comp + OD + Delay 2		96	1	
	V Distortion Soft + Delay	V Distortion Soft and Delay are connected in series.	98	3	
	V Dist Hard + Tmp Delay 1	V Distortion Hard and Tempo Delay are connected in series.	103	0	
	V Dist Hard + Tmp Delay 2		103	17	
	V Dist Soft + Tmp Delay 1	V Distortion Soft and Tempo Delay are connected in series.	103	1	
	V Dist Soft + Tmp Delay 2		103	16	
	Distortion + Tempo Delay	Distortion and Tempo Delay are connected in series.	100	0	
	Overdrive + Tempo Delay	Overdrive and Tempo Delay are connected in series.	100	1	
	Comp + Distortion 1	Since a Compressor is included in the first stage, steady distortion can be produced regardless of changes in input level.	73	16	
	Comp + Distortion 2		73	1	
	Comp + Dist + Tmp Delay	Compressor, Distortion and Tempo Delay are connected in series.	101	0	
	Comp + OD + Tmp Delay 1	Compressor, Overdrive and Tempo Delay are connected in series.	101	1	
	Comp + OD + Tmp Delay 2		101	16	
	Comp + OD + Tmp Delay 3		101	17	
	Comp + OD + Tmp Delay 4		101	18	
	Comp + OD + Tmp Delay 5		101	19	
	Comp + OD + Tmp Delay 6		101	20	
	Multiband Compressor	Multi-band compressor that allows you to adjust the compression effect for individual frequency bands.	105	0	
	Compressor	Holds down the output level when a specified input level is exceeded. A sense of attack can also be added to the sound.	83	0	
	Noise Gate	Gates the input when the input signal falls below a specified level.	84	0	
	EQ Disco	Equalizer effect that boosts both high and low frequencies, as is typical in most disco music.	76	16	
	2Band EQ	A stereo EQ with adjustable LOW and HIGH. Ideal for drum Parts.	77	0	
	Stereo 3Band EQ	A stereo EQ with adjustable LOW, MID, and HIGH equalization.	76	18	
	Harmonic Enhancer 1	Adds new harmonics to the input signal to make the sound stand out.	81	16	
	Harmonic Enhancer 2		81	0	
	Isolator	Controls the level of a specified frequency band of the input signal.	115	0	
	Chorus 3	Conventional chorus program with rich, warm chorusing.	66	16	
	Chorus 4		66	1	
	Chorus 5		65	2	
	Chorus 6		65	0	
	Chorus 7		65	1	
	Chorus 8		65	8	
	Chorus Fast		65	16	
	Chorus Lite		65	17	
	GM Chorus 1		65	3	
	GM Chorus 2		65	4	
	GM Chorus 3		65	5	
	GM Chorus 4		65	6	
	Feedback Chorus		65	7	
	Celeste 1		A 3-phase LFO adds modulation and spaciousness to the sound.	66	0
	Celeste 2			66	2
	Symphonic 2	Adds more stages to the modulation of Celeste.	68	0	
	Ensemble Detune 1	Chorus effect without modulation, created by adding a slightly pitch-shifted sound.	87	0	
	Ensemble Detune 2		87	16	
	Ambience Chorus	Chorus which added early reflection sound.	65	9	
	Ambience Celeste	Celeste which added early reflection sound.	66	9	
	Ambience Symphonic	Symphonic which added early reflection sound.	68	9	
	Flanger 2	Creates a sound similar to that of a jet airplane.	67	16	
	Flanger 3		67	17	
	Flanger 4		67	1	
	Flanger 5		67	0	
	GM Flanger		67	7	
	Dynamic Flanger		Dynamically controlled flanger.	110	0
	Ambience Flanger	Flanger which added early reflection sound.	67	9	
	Phaser 2	Cyclically modulates the phase to add modulation to the sound.	72	8	
	Phaser 3		72	19	
	Tempo Phaser 2	Tempo-synchronized phaser.	108	16	
	E-Piano Phaser 2	Cyclically modulates the phase to add modulation to the sound. For electric piano.	72	18	
	E-Piano Phaser 3		72	16	
	Dynamic Phaser	Dynamically controlled phaser.	111	0	
	Auto Wah 2	Cyclically modulates the center frequency of a wah filter.	78	0	
	Auto Wah + Distortion 2	Distortion can be applied to the output of Auto Wah.	78	1	
	Auto Wah + Dist Hard		78	21	
	Auto Wah + Dist Heavy		78	23	
	Auto Wah + Dist Lite		78	25	
	Auto Wah + Overdrive 1	Overdrive distortion can be applied to the output of Auto Wah.	78	18	
	Auto Wah + Overdrive 2		78	2	
	Auto Wah + OD Hard		78	22	

## DSP Block

Category	Type Name	Description	MSB	LSB	
Legacy	Auto Wah + OD Heavy	Overdrive distortion can be applied to the output of Auto Wah.	78	24	
	Auto Wah + OD Lite		78	26	
	Tmp AutoWah + Dist	Tempo-synchronized Auto Wah. Distortion can be applied to the output.	79	1	
	Tmp AutoWah + Dist Hard		79	21	
	Tmp AutoWah + Dist Heavy		79	23	
	Tmp AutoWah + Dist Lite		79	25	
	Tmp AutoWah + OD		79	2	
	Tmp AutoWah + OD Hard	Tempo-synchronized Auto Wah. Overdrive distortion can be applied to the output.	79	22	
	Tmp AutoWah + OD Heavy		79	24	
	Tmp AutoWah + OD Lite		79	26	
	Touch Wah 2	Changes the center frequency of a wah filter according to the input level.	82	8	
	Touch Wah 3		82	20	
	Touch Wah + Distortion 2	Distortion can be applied to the output of Touch Wah.	82	1	
	Touch Wah + Dist Hard		82	21	
	Touch Wah + Dist Heavy		82	23	
	Touch Wah + Dist Lite		82	25	
	Touch Wah + Overdrive 1		82	17	
	Touch Wah + Overdrive 2		82	2	
	Touch Wah + OD Hard	Overdrive distortion can be applied to the output of Touch Wah.	82	22	
	Touch Wah + OD Heavy		82	24	
	Touch Wah + OD Lite		82	26	
	Wah + Dist + Delay 1		Wah, Distortion and Delay are connected in series.	97	16
	Wah + Dist + Delay 2	Wah, Distortion and Delay are connected in series.	97	0	
	Wah + Dist + Tmp Delay	Wah, Distortion and Tempo Delay are connected in series.	102	0	
	Wah + Overdrive + Delay 1	Wah, Overdrive and Delay are connected in series.	97	17	
	Wah + Overdrive + Delay 2		97	1	
	Wah + OD + Tmp Delay 1	Wah, Overdrive and Tempo Delay are connected in series.	102	1	
	Wah + OD + Tmp Delay 2		102	16	
	Clavi Touch Wah	Clavinet Touch Wah	82	18	
	EP Touch Wah	EP Touch Wah	82	19	
	Pedal Wah + Dist Hard	Distortion can be applied to the output of Pedal Wah.	122	21	
	Pedal Wah + Dist Heavy		122	23	
	Pedal Wah + Dist Lite		122	25	
	Pedal Wah + Overdrive	Overdrive distortion can be applied to the output of Pedal Wah.	122	2	
	Pedal Wah + OD Hard		122	22	
	Pedal Wah + OD Heavy		122	24	
	Pedal Wah + OD Lite		122	26	
	Dual Rotary Speaker 1	Simulates a rotary speaker.	99	0	
	Dual Rotary Speaker 2		99	1	
	Rotary Speaker 2		71	17	
	Rotary Speaker 3		71	18	
	Rotary Speaker 4		70	17	
	Rotary Speaker 5		66	18	
	Rotary Speaker 6		69	0	
	Rotary Speaker 7		71	22	
	2way Rotary Speaker		86	0	
	Dist + Rotary SP		Distortion and rotary speaker connected in series.	69	1
	Dist + 2way Rotary SP	Distortion and 2-way rotary speaker connected in series.	86	1	
	OD + Rotary SP	Overdrive and rotary speaker connected in series.	69	2	
	OD + 2way Rotary SP	Overdrive and 2-way rotary speaker connected in series.	86	2	
	Amp Sim + Rotary SP	Amp simulator and rotary speaker connected in series.	69	3	
	Amp Sim + 2way Rotary SP	Amp simulator and 2-way rotary speaker connected in series.	86	3	
	Tremolo 2	Rich Tremolo effect with both volume and pitch modulation.	71	19	
	Tremolo 3		70	0	
	Guitar Tremolo 1		71	20	
	Guitar Tremolo 2		70	19	
	Vibraphone Rotor	Vibraphone effect.	119	0	
	Auto Pan 2	Several panning effects that automatically shift the sound position (left, right, front, back).	71	0	
	Auto Pan 3		71	1	
	E-Piano Auto Pan		71	21	
	Tempo Auto Pan 2	Tempo-synchronized auto pan.	121	1	
	Pitch Change 1	Changes the pitch of the input signal.	80	16	
	Pitch Change 2		80	0	
	Pitch Change 3		80	1	
	Voice Cancel	Attenuates the vocal part of a CD or other source.	85	0	
	Ambience	Blurs the stereo positioning of the sound to add spatial width.	88	0	
	Talking Modulation	Adds a vowel sound to the input signal.	93	0	
	Lo-Fi	Degrades the audio quality of the input signal.	94	0	
	Dynamic Filter	Dynamically controlled filter.	109	0	
	Dynamic Ring Modulator	Dynamically controlled Ring Modulator.	112	0	
	Ring Modulator	An effect that modifies the pitch by applying amplitude modulation to the frequency of the input.	113	0	
	---	No Effect	0	0	
	---	Through	Bypass without applying an effect.	64	0



# Parameter Chart / Parametertabelle / Tableau des paramètres / Gráfico de parâmetros / Gráfico de parâmetro

Parameter	System				Voice Set	Voice Set Group	Song		Style		Registration		Parameter Lock Group	Note
	Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS	Regist	Freeze Group		
<b>Main</b>														
Song File	×	×	×	×	×	–	×	–	×	×	○	SONG	–	
Style File	×	×	×	○	×	–	×	–	×	×	○	STYLE	–	
Part On/Off (Right1)	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Part On/Off (Right2)	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Part On/Off (Left)	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Audio Player File	×	×	×	×	×	–	×	–	×	×	○	AUDIO	–	
<b>Song</b>														
Track1, 2 On/Off	×	×	×	×	×	–	○	GUIDE SETTING	×	×	○	SONG	–	
Extra Tracks On/Off	×	×	×	×	×	–	×	–	×	×	○	SONG	–	
Sync. Start	×	×	×	×	×	–	×	–	×	×	○	SONG	–	
Channel On/Off	×	×	×	×	×	–	×	–	×	×	○	SONG	–	
<b>Function Menu&gt;Song Setting</b>														
<b>Guide</b>														
Guide Mode	○	×	×	×	×	–	○	GUIDE SETTING	×	×	×	–	–	
Guide Lamp On/Off	○	×	×	×	×	–	×	–	×	×	×	–	–	
Guide Lamp Timing	○	×	×	×	×	–	○	GUIDE SETTING	×	×	×	–	–	
Track1 Channel	○	×	×	×	×	–	○	–	×	×	×	–	–	
Track2 Channel	○	×	×	×	×	–	○	–	×	×	×	–	–	
Auto Ch Set	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Others</b>														
Repeat Mode	○	×	×	×	×	–	×	–	×	×	×	–	–	
Chord Detection Priority	○	×	×	×	×	–	×	–	×	×	×	–	–	
Fast Forward Type	○	×	×	×	×	–	×	–	×	×	×	–	–	
Lyrics Language	○	×	×	×	×	–	○	LYRICS SETTING	×	×	×	–	–	
Quick Start	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Tempo</b>														
Master Tempo	×	×	×	×	×	–	○	TEMPO	○	×	○	TEMPO	–	
<b>Creator&gt;Song Creator</b>														
<b>Setup</b>														
Setup Select	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Channel&gt;Chord/1-16/SysEx./Lyric&gt;Filter</b>														
Main Filter	○	×	×	×	×	–	×	–	×	×	×	–	–	
Control Change Filter	○	×	×	×	×	–	×	–	×	×	×	–	–	
Style Filter	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Score</b>														
Left On/Off	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Right On/Off	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Chord On/Off	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Lyric On/Off	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Note Name On/Off	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Color Note On/Off	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Pedal On/Off	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Fingering On/Off	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Size	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Left Ch	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Right Ch	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Key Signature	×	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Quantize	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
Note Name	○	×	×	×	×	–	○	SCORE SETTING	×	×	×	–	–	
<b>Style</b>														
Accompaniment On/Off	×	×	×	×	×	–	×	–	×	○(0n)	○	STYLE	–	
OTS Link	×	×	×	○(0n)	×	–	×	–	×	×	×	–	–	
Auto Fill In	○	×	×	×	×	–	×	–	×	×	×	–	–	
Section	×	×	×	×	×	–	×	–	×	×	○	STYLE	–	
Synchro Start	×	×	×	×	×	–	×	–	×	○(0n)	○	STYLE	–	

Parameter	System				Voice Set	Voice Set Group	Song		Style		Registration		Parameter Lock Group	Note
	Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS	Regist	Freeze Group		
Synchro Stop	×	×	×	×	×	–	×	–	×	×	○	STYLE	–	
<b>Function Menu&gt;Style Setting</b>														
<b>Style Setting</b>														
OTS Link Timing	○	×	×	×	×	–	×	–	×	×	×	–	–	
Stop ACMP	○	×	×	×	×	–	×	–	×	×	○	STYLE	–	
ACMP ON/OFF Default	○	×	×	×	×	–	×	–	×	×	×	–	–	
Dynamics Control	○	×	×	×	×	–	×	–	×	×	×	–	–	
Synchro Stop Window	○	×	×	×	×	–	×	–	×	×	○	STYLE	–	
Section Set	○	×	×	×	×	–	×	–	×	×	×	–	–	
Tempo Hold	○	×	×	×	×	–	×	–	×	×	×	–	–	
Part On/Off	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Function Menu&gt;Split Point/Chord Fingering</b>														
<b>Split Point</b>														
Chord Detection Area	○	×	×	×	×	–	×	–	×	×	○	STYLE		
Manual Bass	○	×	×	×	×	–	×	–	×	×	○	STYLE		
Split Point (Left)	○	×	×	×	×	–	×	–	×	×	○	STYLE	SPLIT POINT	
Split Point (Style)	○	×	×	×	×	–	○	GUIDE SETTING	×	×	○	STYLE	SPLIT POINT	
<b>Chord Fingering</b>														
Fingering Type	○	×	×	×	×	–	×	–	×	×	○	STYLE	FINGERING	
<b>Creator&gt;Style Creator</b>														
<b>Basic</b>														
Pattern Length	×	×	×	×	×	–	×	–	○	×	×	–	–	
Tempo	×	×	×	×	×	–	×	–	○	×	×	–	–	
Beat	×	×	×	×	×	–	×	–	○	×	×	–	–	
<b>Parameter</b>														
Play Root	×	×	×	×	×	–	×	–	○	×	×	–	–	
Play Chord	×	×	×	×	×	–	×	–	○	×	×	–	–	
NTR	×	×	×	×	×	–	×	–	○	×	×	–	–	
NTT	×	×	×	×	×	–	×	–	○	×	×	–	–	
NTT BASS	×	×	×	×	×	–	×	–	○	×	×	–	–	
High Key	×	×	×	×	×	–	×	–	○	×	×	–	–	
Note Limit Low	×	×	×	×	×	–	×	–	○	×	×	–	–	
Note Limit High	×	×	×	×	×	–	×	–	○	×	×	–	–	
RTR	×	×	×	×	×	–	×	–	○	×	×	–	–	
<b>Edit&gt;Filter</b>														
Main Filter	○	×	×	×	×	–	×	–	×	×	×	–	–	
Control Change Filter	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Music Finder</b>														
Sort By	○	×	×	×	×	–	×	–	×	×	×	–	–	
Sort Order	○	×	×	×	×	–	×	–	×	×	×	–	–	
Style Tempo	○	×	×	×	×	–	×	–	×	×	×	–	–	
Information On/Off	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Search1/2 Display</b>														
Search Result	×	×	×	○	×	–	×	–	×	×	×	–	–	
Record (=Property Setting)	×	×	×	○	×	–	×	–	×	×	×	–	–	
<b>Voice Effect</b>														
Keyboard Harmony On/Off	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	Keyboard Harmony	–	
Poly/Mono (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Poly/Mono (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Poly/Mono (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
DSP (Right1)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
DSP (Right2)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
DSP (Left)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Variation (Right1)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Variation (Right2)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Variation (Left)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	STYLE	–	

Parameter	System				Voice Set	Voice Set Group	Song		Style		Registration		Parameter Lock Group	Note
	Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS	Regist	Freeze Group		
<b>Voice Effect&gt;Keyboard Harmony</b>														
Type	×	×	×	×	○	Keyboard Harmony	○	KEYBOARD VOICE	×	○	○	Keyboard Harmony	–	
Volume	×	×	×	×	○	Keyboard Harmony	○	KEYBOARD VOICE	×	○	○	Keyboard Harmony	–	
Speed	×	×	×	×	○	Keyboard Harmony	○	KEYBOARD VOICE	×	○	○	Keyboard Harmony	–	
Assign	×	×	×	×	○	Keyboard Harmony	○	KEYBOARD VOICE	×	○	○	Keyboard Harmony	–	
Chord Note Only	×	×	×	×	○	Keyboard Harmony	○	KEYBOARD VOICE	×	○	○	Keyboard Harmony	–	
Touch Limit	×	×	×	×	○	Keyboard Harmony	○	KEYBOARD VOICE	×	○	○	Keyboard Harmony	–	
<b>Voice Open/Save&gt;Voice Set</b>														
Voice (Right1)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Voice (Right2)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Voice (Left)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Common</b>														
Volume for Balance (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Volume for Balance (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Volume for Balance (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Touch Sense Depth (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Touch Sense Depth (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Touch Sense Depth (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Touch Sense Offset (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Touch Sense Offset (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Touch Sense Offset (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Part Octave for Right1/Right2	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Part Octave for Left	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Controller</b>														
Modulation Low Pass Filter Control (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Modulation Low Pass Filter Control (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Modulation Low Pass Filter Control (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Modulation Amplitude Control (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Modulation Amplitude Control (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Modulation Amplitude Control (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Modulation LFO PMOD Depth (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Modulation LFO PMOD Depth (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Modulation LFO PMOD Depth (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Modulation LFO FMOD Depth (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Modulation LFO FMOD Depth (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Modulation LFO FMOD Depth (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Modulation LFO AMOD Depth (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Modulation LFO AMOD Depth (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Modulation LFO AMOD Depth (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Sound</b>														
EG Attack (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EG Attack (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EG Attack (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
EG Decay (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EG Decay (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	

Parameter	System				Voice Set	Voice Set Group	Song		Style		Registration		Parameter Lock Group	Note
	Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS	Regist	Freeze Group		
EG Decay (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
EG Release (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EG Release (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EG Release (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Vibrato Depth (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Vibrato Depth (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Vibrato Depth (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Vibrato Speed (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Vibrato Speed (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Vibrato Speed (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Vibrato Delay (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Vibrato Delay (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Vibrato Delay (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Effect/EQ</b>														
DSP Type (Right1)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
DSP Type (Right1) Effect Parameter	×	×	×	×	○	Effect	○	EFFECT	×	○	○	VOICE	–	
DSP Type (Right2)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
DSP Type (Right2) Effect Parameter	×	×	×	×	○	Effect	○	EFFECT	×	○	○	VOICE	–	
DSP Type (Left)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	STYLE	–	
DSP Type (Left) Effect Parameter	×	×	×	×	○	Effect	○	EFFECT	×	○	○	STYLE	–	
DSP Variation Value (Right1)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
DSP Variation Value (Right2)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
DSP Variation Value (Left)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	STYLE	–	
EQ Low Freq (Right1)	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EQ Low Freq (Right2)	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EQ Low Freq (Left)	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	STYLE	–	
EQ High Freq (Right1)	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EQ High Freq (Right2)	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EQ High Freq (Left)	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Vibe Rotor On/Off (Right1)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Vibe Rotor On/Off (Right2)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Vibe Rotor On/Off (Left)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Organ Flute&gt;Footage</b>														
Organ Flutes Footage (Right1)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Footage (Right2)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Footage (Left)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Organ Flutes Type (Right1)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Type (Right2)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Type (Left)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Organ Vibrato On/Off (Right1)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Vibrato On/Off (Right2)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Vibrato On/Off (Left)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Organ Vibrato Depth (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Vibrato Depth (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Vibrato Depth (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Organ Flute&gt;Volume/Attack</b>														
Organ Vibrato Speed (Right1)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Vibrato Speed (Right2)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Vibrato Speed (Left)	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Organ Flutes Attack Footage (Right1)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Attack Footage (Right2)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Attack Footage (Left)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Organ Flutes Attack Mode (Right1)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Attack Mode (Right2)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Attack Mode (Left)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Organ Flutes Attack length (Right1)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	

Parameter	System				Voice Set	Voice Set Group	Song		Style		Registration		Parameter Lock Group	Note
	Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS	Regist	Freeze Group		
Organ Flutes Attack length (Right2)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Attack length (Left)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Organ Flutes Response (Right1)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Response (Right2)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Response (Left)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Organ Flutes Volume (Right1)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Volume (Right2)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Organ Flutes Volume (Left)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Main&gt;Mic Setting</b>														
User Memory	○	×	○	×	×	–	×	–	×	×	×	–	–	
<b>Mic Setting&gt;Vocal</b>														
EQ Low Freq.	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ Low Gain	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ Mid Freq.	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ Mid Gain	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ High Freq.	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ High Gain	×	×	○	×	×	–	×	–	×	×	×	–	–	
Noise Gate On/Off	×	×	○	×	×	–	×	–	×	×	×	–	–	
Noise Gate Threshold	×	×	○	×	×	–	×	–	×	×	×	–	–	
Compressor On/Off	×	×	○	×	×	–	×	–	×	×	×	–	–	
Compressor Threshold	×	×	○	×	×	–	×	–	×	×	×	–	–	
Compressor RAT	×	×	○	×	×	–	×	–	×	×	×	–	–	
Compressor OUT	×	×	○	×	×	–	×	–	×	×	×	–	–	
<b>Mic Setting.&gt;Talk</b>														
Talk Setting Volume	×	×	○	×	×	–	×	–	×	×	×	–	–	
Talk Setting Pan	×	×	○	×	×	–	×	–	×	×	×	–	–	
Talk Setting Reverb Depth	×	×	○	×	×	–	×	–	×	×	×	–	–	
Talk Setting Chorus Depth	×	×	○	×	×	–	×	–	×	×	×	–	–	
Talk Setting Reduction Level	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ Low Freq.	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ Low Gain	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ Mid Freq.	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ Mid Gain	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ High Freq.	×	×	○	×	×	–	×	–	×	×	×	–	–	
EQ High Gain	×	×	○	×	×	–	×	–	×	×	×	–	–	
Noise Gate On/Off	×	×	○	×	×	–	×	–	×	×	×	–	–	
Noise Gate Threshold	×	×	○	×	×	–	×	–	×	×	×	–	–	
Compressor On/Off	×	×	○	×	×	–	×	–	×	×	×	–	–	
Compressor Threshold	×	×	○	×	×	–	×	–	×	×	×	–	–	
Compressor RAT	×	×	○	×	×	–	×	–	×	×	×	–	–	
Compressor OUT	×	×	○	×	×	–	×	–	×	×	×	–	–	
<b>Main&gt;Mixing Console&gt;Vol/Voice</b>														
<b>Volume</b>														
Offset Volume Song	×	×	×	×	×	–	×	–	×	×	○	SONG	–	
Offset Volume Style	×	×	×	×	×	–	×	–	×	×	○	STYLE	–	
Volume Mic	×	×	×	×	×	–	○	MIC	×	×	○	MIC	MIC	
Volume Left	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Volume Right1	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Volume Right2	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Part Volume Song	×	×	×	×	×	–	○	VOLUME	×	×	×	–	–	
Part Volume Style	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
<b>PanPot</b>														
Offset Pan Style	×	×	×	×	×	–	×	–	×	×	○	STYLE	–	
Pan Mic	×	×	×	×	×	–	○	MIC	×	×	○	MIC	MIC	
Pan Left	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Pan Right1	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	

Parameter	System				Voice Set	Voice Set Group	Song		Style		Registration		Parameter Lock Group	Note
	Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS	Regist	Freeze Group		
Pan Right2	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Part Pan Song	×	×	×	×	×	–	○	PAN	×	×	×	–	–	
Part Pan Style	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
<b>Voice</b>														
Voice (Right1)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Voice (Right2)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Voice (Left)	×	×	×	×	○	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Voice (Style Part)	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
Voice (Song Part)	×	×	×	×	×	–	○	VOICE	×	×	×	–	–	
<b>Main&gt;Mixing Console&gt;Filter</b>														
<b>Brightness</b>														
Brightness Song Part	×	×	×	×	×	–	○	FILTER	×	×	×	–	–	
Brightness Style Part	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
Brightness Right1	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Brightness Right2	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Brightness Left	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Harmonic Content</b>														
Harmonic Content Song Part	×	×	×	×	×	–	○	FILTER	×	×	×	–	–	
Harmonic Content Style Part	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
Harmonic Content Right1	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Harmonic Content Right2	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Harmonic Content Left	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Main&gt;Mixing Console&gt;Tune</b>														
<b>Octave</b>														
Octave Right1	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Octave Right2	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Octave Left	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Tuning</b>														
Tune Right1	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Tune Right2	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Tune Left	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Portamento Time</b>														
Portamento Time Right1	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Portamento Time Right2	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Portamento Time Left	×	×	×	×	○	Voice	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Pitch Bend Range</b>														
Pitch Bend Range Right1	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Pitch Bend Range Right2	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Pitch Bend Range Left	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
<b>Transpose</b>														
Master Transpose	×	×	×	×	×	–	×	–	×	×	○	TRANPOSE	–	
Song Transpose	×	×	×	×	×	–	×	–	×	×	○	TRANPOSE	–	
Keyboard Transpose	×	×	×	×	×	–	×	–	×	×	○	TRANPOSE	–	
<b>Main&gt;Mixing Console&gt;Master Compressor</b>														
Master Compressor Type	○	×	×	×	×	–	×	–	×	×	×	–	–	
Master Compressor Threshold Offset	×	×	○	×	×	–	×	–	×	×	×	–	–	
Master Compressor Ratio Offset	×	×	○	×	×	–	×	–	×	×	×	–	–	
Master Compressor Output Gain Offset	×	×	○	×	×	–	×	–	×	×	×	–	–	
Master Compressor On/Off	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Main&gt;Mixing Console&gt;MEQ</b>														
Master EQ Type	○	×	×	×	×	–	×	–	×	×	×	–	MASTER EQ	
Master EQ Parameter	×	×	○	×	×	–	×	–	×	×	×	–	MASTER EQ	
<b>Main&gt;Mixing Console&gt;EQ</b>														
<b>EQ Low Gain</b>														
EQ Low Gain Style Part	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
EQ Low Gain Song Part	×	×	×	×	×	–	○	EQ	×	×	×	–	–	

Parameter	System				Voice Set	Voice Set Group	Song		Style		Registration		Parameter Lock Group	Note
	Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS	Regist	Freeze Group		
EQ Low Gain Right1	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EQ Low Gain Right2	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EQ Low Gain Left	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	STYLE	–	
EQ Low Gain Style (Offset)	×	×	×	×	×	–	×	–	×	×	○	STYLE	–	
<b>EQ High Gain</b>														
EQ High Gain Style Part	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
EQ High Gain Song Part	×	×	×	×	×	–	○	EQ	×	×	×	–	–	
EQ High Gain Right1	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EQ High Gain Right2	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	VOICE	–	
EQ High Gain Left	×	×	×	×	○	EQ	○	KEYBOARD VOICE	×	○	○	STYLE	–	
EQ High Gain Style (Offset)	×	×	×	×	×	–	×	–	×	×	○	STYLE	–	
<b>Main&gt;Mixing Console&gt;Effect</b>														
<b>Reverb Type</b>														
Reverb Type	×	×	×	×	×	–	○	EFFECT	○	×	○	STYLE/SONG	REVERB TYPE	
Reverb Return Level	×	×	×	×	×	–	○	EFFECT	○	×	○	STYLE/SONG	REVERB RETURN LEVEL	
<b>Reverb Depth</b>														
Reverb Depth Style Part	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
Reverb Depth Song Part	×	×	×	×	×	–	○	EFFECT	×	×	×	–	–	
Reverb Depth Mic	×	×	×	×	×	–	○	MIC	×	×	○	MIC	MIC	
Reverb Depth Right1	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Reverb Depth Right2	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Reverb Depth Left	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Reverb Depth Style (Offset)	×	×	×	×	×	–	×	–	×	×	○	STYLE	–	
<b>Chorus Type</b>														
Chorus Type	×	×	×	×	×	–	○	EFFECT	○	×	○	STYLE/SONG	–	
Chorus Return Level	×	×	×	×	×	–	○	EFFECT	○	×	○	STYLE/SONG	CHORUS RETURN LEVEL	
<b>Chorus Depth</b>														
Chorus Depth Style Part	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
Chorus Depth Song Part	×	×	×	×	×	–	○	EFFECT	×	×	×	–	–	
Chorus Depth Mic	×	×	×	×	×	–	○	MIC	×	×	○	MIC	MIC	
Chorus Depth Right1	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Chorus Depth Right2	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Chorus Depth Left	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Chorus Depth Style (Offset)	×	×	×	×	×	–	×	–	×	×	○	STYLE	–	
<b>DSP Type</b>														
DSP1 (Variation) Type	×	×	×	×	×	–	○	EFFECT	○	×	○	STYLE/SONG	–	
DSP1 (Variation) Return Level	×	×	×	×	×	–	○	EFFECT	○	×	○	STYLE/SONG	DSP RETURN LEVEL	
DSP2Type	×	×	×	×	×	–	○	EFFECT	×	×	○	VOICE/STYLE/SONG	–	
DSP3Type	×	×	×	×	×	–	○	EFFECT	×	×	○	VOICE/STYLE/SONG	–	
DSP4Type	×	×	×	×	×	–	○	EFFECT/MIC	×	×	○	VOICE/STYLE/SONG/MIC	–	
<b>DSP Depth</b>														
DSP Depth Style Part	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
DSP Depth Song Part	×	×	×	×	×	–	○	EFFECT	×	×	×	–	–	
DSP Depth Right1	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
DSP Depth Right2	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
DSP Depth Left	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	STYLE	–	
DSP Depth Mic	×	×	×	×	×	–	○	MIC	×	×	○	MIC	–	
<b>Insertion Type</b>														
Insertion Type (Right1)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Insertion Type (Right2)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	VOICE	–	
Insertion Type (Left)	×	×	×	×	○	Effect	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Insertion Type (Song)	×	×	×	×	×	–	○	EFFECT	×	×	×	–	–	
Insertion Type (Mic)	×	×	×	×	×	–	○	EFFECT/MIC	×	×	○	MIC	MIC	

Parameter	System				Voice Set	Voice Set Group	Song		Style		Registration		Parameter Lock Group	Note
	Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS	Regist	Freeze Group		
Effect Parameter (Reverb/Chorus/DSP1)	×	×	○	×	×	–	○	EFFECT	×	×	×	–		
Effect Parameter (Reverb/Chorus/DSP2-4)	×	×	○	×	×	–	○	EFFECT	×	○	○	VOICE/STYLE		
<b>Main&gt;Channel&gt;Channel On/Off Popup</b>														
Channel On/Off (Song)	×	×	×	×	×	–	×	–	×	×	○	SONG	–	
Channel On/Off (Style)	×	×	×	×	×	–	×	–	○	×	○	STYLE	–	
<b>Function Menu&gt;MIDI</b>														
<b>MIDI Template</b>														
Template No.	○	×	×	×	×	–	×	–	×	×	×	–	–	
Preset Template Name	×	○	×	×	×	–	×	–	×	×	×	–	–	
<b>Function Menu&gt;MIDI&gt;EDIT</b>														
<b>System</b>														
Local Control	×	○	×	×	×	–	×	–	×	×	×	–	–	
Clock	×	○	×	×	×	–	×	–	×	×	×	–	–	
Transmit Clock	×	○	×	×	×	–	×	–	×	×	×	–	–	
Receive Transpose	×	○	×	×	×	–	×	–	×	×	×	–	–	
Receive Start/Stop	×	○	×	×	×	–	×	–	×	×	×	–	–	
SysEx Transmit	×	○	×	×	×	–	×	–	×	×	×	–	–	
SysEx Receive	×	○	×	×	×	–	×	–	×	×	×	–	–	
Chord SysEx Transmit	×	○	×	×	×	–	×	–	×	×	×	–	–	
Chord SysEx Receive	×	○	×	×	×	–	×	–	×	×	×	–	–	
<b>Transmit</b>														
Part Select	×	○	×	×	×	–	×	–	×	×	×	–	–	
Ch Select	×	○	×	×	×	–	×	–	×	×	×	–	–	
Filter (for each part)	×	○	×	×	×	–	×	–	×	×	×	–	–	
<b>Receive</b>														
Ch Select	×	○	×	×	×	–	×	–	×	×	×	–	–	
Part Select	×	○	×	×	×	–	×	–	×	×	×	–	–	
Filter (for each part)	×	○	×	×	×	–	×	–	×	×	×	–	–	
<b>Bass (On Bass Note)</b>														
Bass (On Bass Note)	×	○	×	×	×	–	×	–	×	×	×	–	–	
<b>Chord Detect</b>														
Chord Detect	×	○	×	×	×	–	×	–	×	×	×	–	–	
<b>Function Menu&gt;Mater Tune/Scale Tune</b>														
<b>Master Tune</b>														
Master Tune	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Scale Tune</b>														
Scale Type	×	×	×	×	×	–	×	–	×	×	○	SCALE	–	
Base Note	×	×	×	×	×	–	×	–	×	×	○	SCALE	–	
Tune	×	×	×	×	×	–	×	–	×	×	○	SCALE	–	
Part Select (Right1/Right2, Left, Style)	×	×	×	×	×	–	×	–	×	×	○	SCALE	–	
<b>Function Menu&gt;Controller</b>														
<b>Foot Pedal</b>														
Pedal Function	×	×	×	×	○	Pedal	○	KEYBOARD VOICE	×	○	○	PEDAL	–	
Pedal Settings	×	×	×	×	○	Pedal	○	KEYBOARD VOICE	×	○	○	PEDAL	–	
Pedal Polarity	○	×	×	×	×	–	×	–	×	×	×	–	–	
Switch with R1 Voice	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Keyboard/Panel</b>														
Touch Response	○	×	×	×	×	–	×	–	×	×	×	–	–	
Initial Touch Off Level	×	×	×	×	×	–	×	–	×	×	○	VOICE	–	
Initial Touch Part On/Off	×	×	×	×	×	–	×	–	×	×	○	VOICE	–	
Transpose Assign	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Function Menu&gt;Regist Sequence/Freeze</b>														
<b>Regist Sequence</b>														
Regist Sequence Data	×	×	×	×	×	–	×	–	×	×	○	–	–	



Parameter	System				Voice Set	Voice Set Group	Song		Style		Registration		Parameter Lock Group	Note
	Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS	Regist	Freeze Group		
Regist Sequence Enable	○	×	×	×	×	–	×	–	×	×	×	–	–	
Regist (+) Pedal	○	×	×	×	×	–	×	–	×	×	×	–	–	
Regist (-) Pedal	○	×	×	×	×	–	×	–	×	×	×	–	–	
Regist Sequence End	×	×	×	×	×	–	×	–	×	×	○	–	–	
<b>Freeze Group</b>														
Freeze Group Setting	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Function Menu&gt;Voice Setting</b>														
VRM On/Off	○		×	×	×	–	×	–	×	×	×	–	–	
Damper Resonance Depth	○		×	×	×	–	×	–	×	×	×	–	–	
String Resonance Depth	○		×	×	×	–	×	–	×	×	×	–	–	
Reverb Depth	×		×	×	×	–	×	–	×	×	○	–	–	
Chorus Depth	×		×	×	×	–	×	–	×	×	○	–	–	
Piano Tuning Curve	○		×	×	×	–	×	–	×	×	×	–	–	
Key Off Sample	○		×	×	×	–	×	–	×	×	×	–	–	
<b>Voice Set</b>														
Voice Set Group Right1 On/Off	○	×	×	×	×	–	×	–	×	×	×	–	–	
Voice Set Group Right2 On/Off	○	×	×	×	×	–	×	–	×	×	×	–	–	
Voice Set Group Left On/Off	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Function Menu&gt;Utility</b>														
<b>Configuration1</b>														
Fade In Time	○	×	×	×	×	–	×	–	×	×	×	–	–	
Fade Out Time	○	×	×	×	×	–	×	–	×	×	×	–	–	
Fade Out Hold Time	○	×	×	×	×	–	×	–	×	×	×	–	–	
Metronome Volume	○	×	×	×	×	–	×	–	×	×	×	–	–	
Metronome Sound	○	×	×	×	×	–	×	–	×	×	×	–	–	
Time Signature	×	×	×	×	×	–	○	–	○	×	×	–	–	
Tap Count Percussion	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Tap Count Velocity	×	×	×	×	×	–	○	KEYBOARD VOICE	×	○	○	STYLE	–	
Auto Power Off	○	×	×	×	×	–	×	–	×	×	×	–	–	
LCD Brightness	○	×	×	×	×	–	×	–	×	×	×	–	–	Cannot be reset with Factory Reset.
<b>Configuration2</b>														
Speaker	○	×	×	×	×	–	×	–	×	×	×	–	–	
Stereophonic Optimizer	○	×	×	×	×	–	×	–	×	×	×	–	–	Cannot be reset with Factory Reset.
AUX In Noise Gate	○	×	×	×	×	–	×	–	×	×	×	–	–	
I.A.Control Sw	○	×	×	×	×	–	×	–	×	×	×	–	–	
I.A.Depth	○	×	×	×	×	–	×	–	×	×	×	–	–	
Display Style Tempo	○	×	×	×	×	–	×	–	×	×	×	–	–	
Display Voice Number	○	×	×	×	×	–	×	–	×	×	×	–	–	
Display Time Stamp	○	×	×	×	×	–	×	–	×	×	×	–	–	
Voice Category Button Options	○	×	×	×	×	–	×	–	×	×	×	–	–	
Popup Display Time	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Parameter Lock</b>														
Parameter Lock	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>USB</b>														
Song Auto Open	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>Function Menu&gt;System</b>														
<b>Owner</b>														
Language	○	×	×	×	×	–	×	–	×	×	×	–	–	Cannot be reset with Factory Reset.
Owner Name	○	×	×	×	×	–	×	–	×	×	×	–	–	Cannot be reset with Factory Reset.
<b>Registration</b>														
Regist Memory Contents	○	×	×	×	×	–	×	–	×	×	×	–	–	

Parameter	System				Voice Set	Voice Set Group	Song		Style		Registration		Parameter Lock Group	Note
	Setup	MIDI Setup	User Effect	Music Finder			Song	Song Setup Group	Style Data	OTS	Regist	Freeze Group		
Regist Contents Name	×	×	×	×	×	–	×	–	×	×	○	–	–	
<b>Transpose</b>														
Transpose	×	×	×	×	×	–	×	–	×	×	○	TRANSPOSE	–	
<b>USB Audio Player</b>														
Audio Volume	○	×	×	×	×	–	×	–	×	×	○	AUDIO	–	
Audio Player Repeat Mode	○	×	×	×	×	–	×	–	×	×	×	–	–	
Audio Player File	×	×	×	×	×	–	×	–	×	×	○	AUDIO	–	
Vocal Cancel	×	×	×	×	×	–	×	–	×	×	○	AUDIO	–	
Time Stretch	×	×	×	×	×	–	×	–	×	×	○	AUDIO	–	
Pitch Shift	×	×	×	×	×	–	×	–	×	×	○	AUDIO	–	
<b>Style Recommender</b>														
Information display SW	○	×	×	×	×	–	×	–	×	×	×	–	–	
<b>PianoRoom</b>														
Piano Lock	○	×	×	×	×	–	×	–	×	×	×	–	–	
Voice	○	×	×	×	×	–	×	–	×	×	×	–	–	
Style	○	×	×	×	×	–	×	–	×	×	×	–	–	
Style Tempo	×	×	×	×	×	–	×	–	×	×	×	–	–	
Style Volume	×	×	×	×	×	–	×	–	×	×	×	–	–	
Style Part On/Off	○	×	×	×	×	–	×	–	×	×	×	–	–	
Song	×	×	×	×	×	–	×	–	×	×	×	–	–	
Metronome On/Off	×	×	×	×	×	–	×	–	×	×	×	–	–	
Environment	○	×	×	×	×	–	×	–	×	×	×	–	–	
Lid Position	○	×	×	×	×	–	×	–	×	×	×	–	–	
Tune	○	×	×	×	×	–	×	–	×	×	×	–	–	
Dynamics Control	○	×	×	×	×	–	×	–	×	×	×	–	–	
Section Control	○	×	×	×	×	–	×	–	×	×	×	–	–	
Fingering Type	○	×	×	×	×	–	×	–	×	×	×	–	–	
Split Point	○	×	×	×	×	–	×	–	×	×	×	–	–	

MEMO



ZN76550

Manual Development Department  
© 2015 Yamaha Corporation

Published 03/2016 MWAP\*.\*- \*\*B0  
Printed in Vietnam

**ZN76550**